

VERTIV™

Albér Battery Xplorer

Release Notes

VERSION 3.5.8.4

Release Notes Section Outline

- 1 Updates for This Release (Version 3.5.8.4)
- 2 Version 3.3.7.2 Update Information
- 3 Version 3.3.7.1 Update Information
- 4 Version 3.2.7.21 (Controlled Release) Update Information
- 5 Version 3.2.7.20 Update Information
- 6 Version 3.1.187 Update Information

1 Updates for This Release (Version 3.5.8.4)

- Preventive maintenance reports now available.
- UXCM backup viewing now available offline.
- Inter-tier maximum number is now increased to 96.
- Commissioning report enhancements and improvements added.
- The correct installation date is now shown in the discharge report.
- The Commissioning report now has a section for system parameters (overall voltage, ambient temperatures and currents).
- Added support of new UXBM-50 string configuration (075) 48x12V, 12 shelves of 4 jars, or 12S of 4J.
- Version and model number on the commissioning report is no longer truncated.

2 Version 3.3.7.2 Update Information

This release added new configuration #074 to the XML file to support 36x12V, 6 shelves of 6 jars, or 6S of 6J.

3 Version 3.3.7.1 Update Information

- Added license agreement to the installer.
- Added two new configurations for 1x41x12V and 1x34x12V.
- Inter-tier alarms are now reported even when intercell optional parameter is disabled.
- String commissioning reports names are now improved to help distinguish reports on customer sites.

4 Version 3.2.7.21 (Controlled Release) Update Information

- Reports now support European date formats.
- Detail cell report now shows all cells.
- String commission reports now populate all device information.

5 Version 3.2.7.20 Update Information

- Corrected discharge overall voltage unit displayed (V).
- Discharge current highlighting shows correctly for a high negative discharge current.
- Discharge playback enhancements.
- Enhanced thermal runaway user interface.
- Velocity client login improvements for multiple clients/network connections.
- Velocity client improvements to support multiple connections from the same network card/computer.
- USB connection enhancements.
- Added battery and string information to commissioning report filenames.
- Reports no longer freeze when exporting to PDF and XLS.

6 Version 3.1.187 Update Information

- Tag ID under hardware view now displays correct information [internal ID number 2441].
- Changed description for hardware configuration number 013 to 3 shelves of 8 jars and 2 shelves of 4 jars on setup wizard [internal ID number 2462].
- Removed configuration for hardware configuration numbers 027 and 030 on setup wizard to avoid confusion of having two listings for 32x12V open rack systems in the drop-down listing [internal ID number 2475].
- Added new open rack configurations for setup wizard (42x12, 44x12, 48x12, and 50x12) [internal ID number 2507].
- Improved how pie charts display in battery view to avoid access violation errors; now, only needed pie charts are created instead of loading all charts possible before displaying [internal ID number 2520].
- Added warning message for user to select a hardware node when assigning strings to hardware if none are selected [internal ID number 2526].
- String validation wizard no longer requires Ambient Temperature 2 enabled to be able to complete validation [internal ID number 2527].
- Installer now includes all latest firmware available at release time [internal ID number 2557].
- Added "all" and "none" selection buttons and fixed overall voltage and string current values on discharge report [internal ID number 2561].
- Ambient Temperature readings now display correct value of N/A when temperature is not available [internal ID number 2562].
- Ambient Temperature reading on discharge playback now displays N/A for a value if it is enabled and not connected; it used to display 10996.5° F [internal ID number 2573].