

VERTIV™

Albér Universal Xplorer Industrial Monitor (UXIM) and Universal Xplorer Telecom Monitor (UXTM)

Software Release Notes

VERSION 1.15

Release Notes Section Outline

- 1 Updates for This Release (Version 1.15)
- 2 Version 1.12 Update Information
- 3 Version 1.11 Update Information
- 4 Version 1.10 (Controlled Release) Update Information
- 5 Version 1.09 Update Information
- 6 Early Version Update Mapping Table (From Version 1.1.0.0 to 1.07)

1 Updates for This Release (Version 1.15)

- High cell temperature alarm latching available.
- Minor alarm thresholds included in startup report.
- Resistance baseline values now reflect correct value in startup report.
- Disabled refresh and delete buttons during a discharge.
- Alarm threshold will be set with minimum value if input data entered is out of range.
- Resistance is now disabled during discharge.
- Intertier alarm threshold no longer loses setting when changing charger cable or ground fault settings.
- Ripple current alarm status is disabled after a resistance test for one hour.
- Added calibration button to tool/general screen.
- Support added for reverse cell conditions.
- Detail discharge data no longer has missing cells during discharge playback.

2 Version 1.12 Update Information

- Cell temperature reading is not included in startup report when disabled.
- Ambient temperature, ground fault and charger cable readings added to startup report.
- Hover over reading values on resistance bar graph only shown when resistance test completes.
- Application now starts properly on computers without serial ports.

3 Version 1.11 Update Information

- Thermal runaway cell to ambient temperature alarm setting is now not shown when connected to an UXIM system.
- New correlation tab for discharge current and resistance data is added for better accuracy between actual and measured readings.
- Intercell selection now available for measuring discharge current.

4 Version 1.10 (Controlled Release) Update Information

- Calibration button removed to prevent field issues.
- Added buttons to send commands for monitoring, clearing alarms, disabling timers and enabling alarm detection after discharge or resistance test.
- New firmware upgrade files extension added to distinguish between UXTM and UXIM devices.
- Removed Cell Temperature checkbox when connected to the UXIM.
- Users are now prevented from manually entering network Netmask address.
- Fixed an issue occurring when setting the ambient temperature probe count greater than one.
- Start-up report now uses Configurator temperature setting when displaying temperature units (F and C).
- Start-up report now displays alarm latch status.
- Added Alber logo to Start-up report.
- Removed Cell Temperature reading table for UXIM Start-up report.
- Added baseline readings to Start-up report.

5 Version 1.09 Update Information

- Added support for two sets of alarms: Major (Warning) and Minor (Caution).
- Added control to disable, enable and latch both major and minor alarms.
- Fixed float alarm threshold resetting issue.
- Report creation time is now included in report.
- Fixed “alarm disabled” timer display after discharge.
- Added the ability to export cell voltages, resistance and baseline values to Excel.

6 Early Version Update Mapping Table (From Version 1.1.0.0 to 1.07)

| INTERNAL REF NUMBER | VERSION | UPDATE/NEW FEATURE DESCRIPTION |
|---------------------|---------|--|
| 2575 | 1.07 | Fixed crash when trying to access the Setup tree node when there was no ambient temperature available in the hardware. |
| 2576 | 1.07 | Added feature to create startup report. |
| 2548 | 1.06.00 | Discharge duration now displays correct time if discharge happens after a resistance test. |
| 2547 | 1.06.00 | Enabled ambient temperature setup when connected to the UXIM. |
| 2541 | 1.06.00 | Corrected power switch selection when connected to UXTM. |
| 2540 | 1.06.00 | Fixed ambient temperature number displayed when connected to the UXIM. |
| 2536 | 1.06.00 | Added support for the UTXM 1X23X2 configuration. |
| 2535 | 1.06.00 | Removed overall discharge playback filter option. |
| 2534 | 1.06.00 | Added enable/disable ambient temperature option. |
| 2533 | 1.06.00 | Discharge events are now refreshed when the user clicks the <i>Discharge Events</i> link. |
| 2525 | 1.06.00 | Removed positive and negative ground fault alarm threshold from the threshold setup screen when software is connected to the UXTM. The UXTM does not support positive and negative ground fault measurement. |
| 2524 | 1.06.00 | Removed ground fault alarm threshold from the threshold setup screen. |

| INTERNAL REF NUMBER | VERSION | UPDATE/NEW FEATURE DESCRIPTION |
|---------------------|---------|---|
| 2513 | 1.06.00 | Removed the Emerson tab. |
| 2512 | 1.06.00 | Removed load test tab. |
| 2511 | 1.06.00 | Removed discharge detail button when connected to UXTM. |
| 2509 | 1.06.00 | Removed positive and negative ground fault real-time reading when connected to the UXTM. |
| 2508 | 1.06.00 | Removed ground fault tab from the tools node. |
| 2468 | 1.06.00 | Added confirmation message when trying to delete discharge data. |
| 2467 | 1.06.00 | Changed the text on the button that clears discharge data to "Delete." |
| 2455 | 1.06.00 | Positive and negative ground fault voltages are now displayed under ripple current when connected to the UXIM. |
| 2452 | 1.06.00 | Resistance test result message is now reported correctly after test. |
| 2238 | 1.06.00 | The charger cable on the Internal Resistance tab is grayed out. |
| 2207 | 1.06.00 | The configuration number is set back to the default in the software (UXTM 1X24X2 and UXIM 1X58X2) to prevent the application from crashing. |
| 2192 | 1.06.00 | Added minus sign (-) to discharge trigger input text. |
| 2188 | 1.05.00 | When the software application is initially run, the window is maximized. |
| 2182 | 1.05.00 | On the Internal Resistance window, the power select option is removed for the UXIM. |
| 2180 | 1.05.00 | Status text is changed from "get" to "getting" or "reading". |
| 2178 | 1.05.00 | The system no longer goes unresponsive when setting the IP address using the software (range for port number). |
| 2176 | 1.05.00 | Added new support for positive and negative charger cable measurements. |
| 2160 | 1.05.00 | Added new shortcut to the Help menu to open the document folder when the user selects <i>Help- Documents</i> . |
| 2162 | 1.05.00 | The Temperature tab is now disabled when connecting to the UXIM. |
| 2110 | 1.4.0.0 | Added a new feature to enable/disable cell temperature measurement readings on a battery string. |
| 2112 | 1.4.0.0 | Added a new feature allowing factory default settings to be restored back to their original values. This option clears historical data including the install date, resistance test interval, system configuration, RS-485 MODBUS address, RS-484 baud rate and the temperature scale. A warning message appears to inform you of the change; you can continue or cancel the change. |
| 2131 | 1.4.0.0 | A new feature was added to set thermal runaway detection triggers using float current and/or cell to ambient delta temperature alarm types. |
| 2134 | 1.4.0.0 | The ambient temperature now displays "N/A" for the string number and cell number in the Alarm Status window. |
| 2136 | 1.4.0.0 | When viewing the Internal Resistance window, the low threshold indicator line is now properly positioned in the graph area. |
| 2137 | 1.4.0.0 | The summary information text in the UXTM window has been formatted to be left aligned and evenly spaced with the associated data. |
| 2138 | 1.4.0.0 | Corrected the Apply button graphic in the network window so it is in full view when clicked. |
| 2139 | 1.4.0.0 | Corrected a spelling error in the network setup message. |
| 2035 | 1.2.0.0 | The real-time stamp and data record now show the correct day and time. |

| INTERNAL REF NUMBER | VERSION | UPDATE/NEW FEATURE DESCRIPTION |
|---------------------|---------|---|
| 2033 | 1.2.0.0 | Discharge events and alarm status screens can now be displayed in temperatures of Fahrenheit or Celsius. |
| 2030 | 1.2.0.0 | The cell to ambient temperature can now be displayed either in Fahrenheit or Celsius. |
| 2029 | 1.2.0.0 | The configurator now displays one decimal point number for the overall voltage. |
| 2023 | 1.2.0.0 | By default, the configurator displays temperature alarm thresholds in Fahrenheit. |
| 2022 | 1.2.0.0 | Alarm thresholds are now correct for non-us data format. |
| 2004 | 1.2.0.0 | To make the configurator more intuitive, the site information has been moved to the setup node. |
| 2003 | 1.2.0.0 | On the Network Connection window, the label changed from USB to Network when a network connection is being used. |
| 2002 | 1.2.0.0 | When checking the Intercell Calculation checkbox, the message has been modified. |
| 2001 | 1.2.0.0 | On the Internal Resistance window, the checkbox changed from Intercell Calculation to Set Baseline. |
| 1709 | 1.1.0.0 | When running a resistance test, the Start button changes to Stop while the resistance test is running. The button goes back to Start when the test is complete. |
| 1710 | 1.1.0.0 | During a resistance test, the system shows the test is in progress. |
| 1848 | 1.1.0.0 | The application now displays a dynamic communication status on the bottom-left corner of the UXTM windows. |
| 1900 | 1.1.0.0 | Added printed circuit board (PCB) sub revision number to the General page. These fields are view only. |

© 2017 Vertiv Co. All rights reserved. Vertiv and the Vertiv logo are trademarks or registered trademarks of Vertiv Co. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness herein, Vertiv Co. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications are subject to change without notice.