

Alber Universal Xplorer Industrial Monitor (UXIM) Battery Monitor

Installation Guide



Albercorp
7775 West Oakland Park Blvd
Sunrise, FL 33351
Tel: (954) 377-7101
www.alber.com
4200-106

Copyright and Disclaimer

Universal Xplorer Industrial Monitor (UXIM) Battery Monitor Installation Guide

Document Revision	2
Part Number	4200-106

Revision History

Revision	Date of Change	Description of Change	By
1.00	10/28/12	Initial Release. First Revision	MS
1.01	02/13/13	Added UXIM Specifications section and updated input power and packaging areas. Added Equipment Operation in the Product Safety Practices section. Removed grounding information.	MS
1.02	03/20/13	Updated UXIM Specifications section and updated input power area.	CC, MS
1.03	03/27/13	Updated UXIM Safety section and added functional earth ground.	CC, MS
1.04	04/24/13	Updated UXIM Installation Category from 1 to O for other.	CC, MS
1.05	05/28/13	Updated UXIM specifications from Installation Category to Measurement Category.	CC, MS
1.06	10/18/13	Updated UXIM materials received list with 50' harnesses.	CC, MS
1.07	06/24/15	Added new address and phone number	MS
1.08	10/23/15	Updated new cable lengths to include 75 and 100 feet.	MS
2	02/15/16	Updated revision number from 1.08 to 2. This was done so documentation can be added to the Agile/LES system. Also updated the copyright year from 2015 to 2016	MH, MS

Albér Universal Xplorer Industrial Monitor (UXIM) Battery Monitor Installation Guide, Part Number 4200-106

©2016 Albércorp. All rights reserved.

Albércorp, 7775 West Oakland Park Blvd, Sunrise, FL 33351 USA.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording for any purpose, without the express written permission of Albércorp.

Information in this document is subject to change without notice.

Trademarks

The first instances of registered trademarks or trademarks of Albércorp and other companies are annotated above using the ® and ™ symbols. For ease of reading, these symbols do not appear in the remainder of this document.

Printed in the United States of America.

Alber Customer Service

Alber Customer Service is available Monday to Friday, 8:00AM to 4:30PM Eastern Time.

Telephone: (954) 377-7101

Email: service@alber.com

Website: www.alber.com

Corporate Office Address:

Albercorp

7775 West Oakland Park Blvd

Sunrise, FL 33351 USA

SOFTWARE LICENSE AGREEMENT

READ THESE TERMS AND CONDITIONS CAREFULLY BEFORE ATTEMPTING TO DOWNLOAD, INSTALL, OR USE THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE, YOU AGREE TO BE BOUND BY THESE TERMS AND CONDITIONS. IF YOU DO NOT ACCEPT THESE TERMS AND CONDITIONS, DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE. IN SUCH A CIRCUMSTANCE, THE SOFTWARE MAY BE RETURNED WITHIN THIRTY (30) DAYS OF YOUR RECEIPT FOR A FULL SOFTWARE REFUND. YOU REPRESENT THAT YOU (I) ARE NOT LOCATED IN, UNDER THE CONTROL OF, OR A NATIONAL RESIDENT OF ANY COUNTRY TO WHICH THE UNITED STATES HAS EMBARGOED GOODS, (II) ARE NOT ON THE U.S. TREASURY DEPARTMENT'S LIST OF SPECIALLY DESIGNATED NATIONALS, (III) ARE NOT ON THE U.S. COMMERCE DEPARTMENT'S LIST OF DENIED PERSONS, OR (IV) ARE NOT OTHERWISE PROHIBITED BY U.S. LAW FROM RECEIVING OR USING THE SOFTWARE (COLLECTIVELY "EXPORT RESTRICTIONS"). IF YOU DO NOT HAVE AUTHORITY TO ACCEPT THIS AGREEMENT FOR YOUR ORGANIZATION, IT IS YOUR OBLIGATION TO ENSURE THAT AN AUTHORIZED INDIVIDUAL MAKES THE DETERMINATION THAT YOUR ORGANIZATION IS NOT SUBJECT TO THE ABOVE EXPORT RESTRICTIONS PRIOR TO DOWNLOADING, INSTALLING, OR USING THE SOFTWARE.

This Software License Agreement ("Agreement") is a legal agreement between you and Albér Corp., a Florida, United States of America, corporation, ("Albér"). Albér's software, including enhancements, upgrades, and any future releases, if provided, are made available exclusively for use with the associated Albér products (the "Products"). The foregoing, including any accompanying program(s), documentation, images, animation, and text incorporated therein, (collectively "Software"), is provided solely for commercial and industrial use under the license terms specified herein.

GRANT OF RIGHTS: Provided that you comply with all of the terms of this Agreement, Albér grants a non-exclusive, non-transferable license to you to install and use the Software solely for use with Products as provided for herein. You represent and warrant that you will not use the Software in violation of applicable laws and regulations or where such use detrimentally affects Albér's rights in the Software or subjects Albér to liability. You assume responsibility for the selection of the Software to achieve your intended results, and for the installation, use, and the results obtained from the Software. Provided that you have paid the applicable license fees, you may use (i) BMDM with SQL, on one server on one site, with a maximum of two hundred (200) users; (ii) all other Software, an unlimited number users per site. Any other operation of the Software at any time shall constitute a material breach of this Agreement and shall terminate this license as provided for below. By use of the Software, you agree that Albér may, at its option, perform an audit of your usage of the Software to determine the number of servers and Products that are using the Software.

TERMINATION OF LICENSE: Your license is automatically terminated if you: (1) use the Software with anything other than Products, (2) attempt to copy or reconstruct any part of the object code, source code, or algorithms, (3) attempt to decompile, disassemble or reverse engineer the Software, in whole or in part, or otherwise attempt to derive the source code of the Software, (4) provide, disclose, sell, rent, lease, license, sublicense, or otherwise transfer or assign the Software to any third party, (5) use the Software in excess of the licensed coverage purchased, (6) write or develop any derivative software or any other software program based upon the Software, (7) modify or alter the Software, or (8) fail to comply with any other license terms. You may elect to terminate this license at any time by destroying the Software together with all copies and any portions thereof in any form.

LIMITED WARRANTY: Albér represents that it has the right and authority to grant the license herein. Albér warrants solely to you for a period of thirty (30) days from the date of Albér shipment or distribution that the distribution media (if supplied) on which the Software is furnished under normal use will be free from defects in material and workmanship and the Software will substantially conform to Albér published

documentation. EXCEPT FOR THE ABOVE EXPRESS WARRANTIES, THIS SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR INTENDED PURPOSE. ALBÉR DOES NOT WARRANT THAT THE SOFTWARE FUNCTIONS WILL MEET YOUR REQUIREMENTS OR THAT THE SOFTWARE WILL OPERATE UNINTERRUPTED OR ERROR FREE.

LIMITATION OF REMEDIES: Albér's entire liability and your exclusive remedy arising from use or inability to use the Software is: (1) The replacement of any distribution media not meeting Albér's warranty, or (2) If Albér is unable to provide you a replacement that conforms to Albér's warranty, to refund the purchase price. **THE REMEDIES SET FORTH IN THIS AGREEMENT ARE EXCLUSIVE.**

LIMITATION OF DAMAGES: IN NO EVENT, REGARDLESS OF THE FORM OF THE CLAIM OR CAUSE OF ACTION (WHETHER BASED IN CONTRACT, INFRINGEMENT, NEGLIGENCE, STRICT LIABILITY, OTHER TORT, OR OTHERWISE), SHALL ALBÉR'S LIABILITY TO YOU EXCEED THE PRICE PAID BY YOU FOR THE SOFTWARE. YOU AGREE THAT ALBÉR'S LIABILITY TO YOU SHALL NOT EXTEND TO INCLUDE SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF ALBÉR IS ADVISED OF THE POSSIBILITY OF THESE DAMAGES. The term "consequential damages" shall include, but not be limited to, loss of anticipated profits, business interruption, loss of use, revenue, reputation and data, costs incurred, including without limitation, for capital, fuel, power and loss or damage to property or equipment. You acknowledge that this Agreement reflects this allocation of risk.

COPYRIGHT: This Software is the proprietary property of Albér and/or its suppliers and is protected by United States copyright laws, other applicable copyright laws, and international treaty provisions. Title and ownership of all copyrights to the Software remain in Albér or third parties. Accordingly, your rights to use, copy and modify the Software are strictly limited to the specific rights provided in this Agreement or as may otherwise be required by applicable copyright law.

U.S. GOVERNMENT RESTRICTED RIGHTS: This Software is developed at private expense and is provided with "Restricted Rights." Use, duplication, or disclosure by the United States Government is subject to restrictions set forth in the Federal Acquisition Regulations and its Supplements.

ASSIGNMENT: You may not sublicense, assign, or otherwise transfer this license of the Software without the prior written consent of Albér. Any such transfer of rights, duties, or obligations is void and terminates this Agreement.

EXPORT RESTRICTIONS: You may not export the Software in violation of applicable export laws and regulations of the applicable countries. You agree to comply with all laws, regulations, decrees and orders of the United States of America that restrict the exportation (or re-exportation) of the Software to other countries, including, without limitation, the U.S. Export Administration Regulations.

UPDATE POLICY: Albér may create, from time to time, updated versions of the Software. Albér reserves the right to make changes to or improvements in any aspect of the Software at any time without prior notice to you and without an obligation to supply such changed and/or improved Software to you.

NUCLEAR/MEDICAL: THE SOFTWARE IS NOT FOR USE IN CONNECTION WITH ANY NUCLEAR, MEDICAL, LIFE-SUPPORT, AND RELATED APPLICATIONS. You agree to defend, indemnify, and hold harmless Albér from any claims, losses, suits, judgments and damages, including incidental and consequential damages, arising from such use, whether the cause of action be based in tort, contract or otherwise, including allegations that the Albér's liability is based on negligence or strict liability.

JAVA SUPPORT: The Software may contain support for programs written in Java. Java Technology is not fault tolerant and is not designed, manufactured, or intended for use or resale as online control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear

facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of java technology could lead directly to death, personal injury, or severe physical or environmental damage.

COMPLETE AGREEMENT/GOVERNING LAW/VENUE: This Software license agreement comprises the final and complete agreement between the parties. No person is authorized to change or modify this Agreement except an executive officer of Albér Corporation and then only in writing. The laws of the United States and the State of Florida shall apply to this Agreement and its interpretation without reference to choice or conflict of laws principles. Albér and you hereby irrevocably submit to the personal and subject matter jurisdiction of any State of Florida or federal court sitting in Miami, Florida, in any action or proceeding arising from or relating to this Agreement. If any provision of this Agreement is held to be void, invalid, unenforceable, or illegal, the other provisions shall continue in full force and effect.

LIMITED WARRANTY FOR ALBÉR PRODUCTS

This Warranty is given ONLY to purchasers who buy for commercial or industrial use in the ordinary course of each purchaser's business.

General:

Albér Corp. products and systems are, in our opinion, the finest available. We take pride in our products and are pleased that you have chosen them. Under certain circumstances, we offer with our products the following One Year Warranty Against Defects in Material and Workmanship.

Please read your Warranty carefully. This Warranty sets forth our responsibilities in the unlikely event of defect and tells you how to obtain performance under this Warranty.

ONE YEAR LIMITED WARRANTY AGAINST DEFECTS IN MATERIAL AND WORKMANSHIP

ALBÉR PRODUCTS COVERED:

BDS-40, BDS 256XL, BDSU, MPM-100, UXIM, and UXTM.

Terms of Warranty:

As provided herein, the Albér product is warranted to be free of defects in material and workmanship for a period of twelve (12) months from date of commissioning, not to exceed eighteen (18) months from date of shipment, provided that startup is performed by Albér authorized personnel, and the product has been stored in a suitable environment prior to start-up. The start-up date will be determined only from the completed ASCOMP file provided to Albér from User and accepted by Albér. The product shipment date will be determined only from the Albér bill of lading. If any part or portion of the Albér product fails to conform to the Warranty within the Warranty period, Albér, at its option, will furnish new or factory remanufactured products for repair or replacement of that portion or part.

Warranty Extends to First Purchaser for Use. Non-transferable:

This Warranty is extended to the first person, firm, association or corporation for whom the Albér product specified herein is originally installed for use (the "User"). This Warranty is not transferable or assignable without the prior written permission of Albér.

Assignment of Warranties:

Albér assigns to User any warranties which are made by manufacturers and suppliers of components of, or accessories to, the Albér product and which are assignable, but Albér makes NO REPRESENTATIONS as to the effectiveness or extent of such warranties, assumes NO RESPONSIBILITY for any matters which may be warranted by such manufacturers or suppliers and extends no coverage under this Warranty to such components or accessories.

Drawings. Descriptions:

Albér warrants for the period and on the terms of the Warranty set forth herein that the Albér product will conform to the descriptions contained in the approved drawings, if any, applicable thereto, to Albér's final invoices, and to applicable Albér product brochures and manuals current as of the date of product shipment ("Descriptions"). Albér does not control the use of any Albér product. Accordingly, it is understood that the Descriptions are NOT WARRANTIES OF PERFORMANCE and NOT WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE.

Warranty Claims Procedure:

Within a reasonable time, but in no case to exceed thirty (30) days after User's discovery of a defect, User shall contact Albér at 1-800-851-4632.

User shall ship the product, with proof of purchase, to Albér freight prepaid. Albér products shipped to Albér without a return authorization number will be refused and returned freight collect to User at User's expense. Products shipped by User to Albér which have incurred freight damage due to User's improper packaging of the product will not be covered by this Warranty and any replacement parts, components or products needed will be invoiced in the full current price amount and returned freight collect to User.

Subject to the limitations specified herein, Albér will replace, without charge for Albér labor or materials, subsequent to its inspection, and return freight prepaid F.O.B. Albér's facility, the product shipped to Albér with a return authorization number and warranted hereunder which does not conform to this Warranty.

Warranty coverage will be applicable only after Albér's inspection discloses the claimed defect and shows no signs of treatment or use that would void the coverage of this Warranty. All defective products and component parts replaced under this warranty become the property of Albér.

Warranty Performance of Component Manufacturers:

It is Albér's practice, consistent with its desire to remedy Warranty defects in the most prompt and effective manner possible, to cooperate with and utilize the services of component manufacturers and their authorized representatives in the performance of work to correct defects in the product components. Accordingly, Albér may utilize third parties in the performance of Warranty work, including repair or replacement hereunder, where, in Albér's opinion, such work can be performed in less time, with less expense, or in closer proximity to the Albér product.

Items Not Covered By Warranty:

THIS WARRANTY DOES NOT COVER DAMAGE OR DEFECT CAUSED BY misuse, improper application, wrong or inadequate electrical current or connection, negligence, inappropriate on site operating conditions, repair by non-Albér designated personnel, accident in transit, tampering, alterations, a change in location or operating use, exposure to the elements, Acts of God, theft or installation contrary to Albér's recommendations or specifications, or in any event if the Albér serial number has been altered, defaced, or removed.

THIS WARRANTY DOES NOT COVER shipping costs, installation costs, or maintenance or service items and further, except as may be provided herein, does NOT include labor costs or transportation charges arising from the replacement of the Albér product or any part thereof or charges to remove or reinstall same at any premises of User.

REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR PART THEREOF DOES NOT EXTEND THE ORIGINAL WARRANTY PERIOD.

Limitations:

- THIS WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.
- USER'S SOLE AND EXCLUSIVE REMEDY IS REPAIR OR REPLACEMENT OF THE ALBÉR PRODUCT AS SET FORTH HEREIN.
- IF USER'S REMEDY IS DEEMED TO FAIL OF ITS ESSENTIAL PURPOSE BY A COURT OF COMPETENT JURISDICTION, ALBÉR'S RESPONSIBILITY FOR PROPERTY LOSS OR DAMAGE SHALL NOT EXCEED THE NET PRODUCT PURCHASE PRICE.
- IN NO EVENT SHALL ALBÉR ASSUME ANY LIABILITY FOR INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES OF ANY KIND WHATSOEVER, INCLUDING WITHOUT LIMITATION LOST PROFITS, BUSINESS INTERRUPTION OR LOSS OF DATA, WHETHER ANY CLAIM IS BASED UPON THEORIES OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, TORT, OR OTHERWISE.

Miscellaneous:

- NO SALESPERSON, EMPLOYEE OR AGENT OF ALBÉR IS AUTHORIZED TO ADD TO OR VARY THE TERMS OF THIS WARRANTY. Warranty terms may be modified, if at all, only by a writing signed by a Albér officer.
- Albér obligations under this Warranty are conditioned upon Albér timely receipt of full payment of the product purchase price and any other amounts due. During the period when any amounts are overdue from User, Albér warranty obligations shall be suspended. The warranty expiration date shall not be extended upon payment of the overdue amount. Albér reserves the right to supplement or change the terms of this Warranty in any subsequent warranty offering to User or others.
- In the event that any provision of this Warranty should be or becomes invalid and/or unenforceable during the warranty period, the remaining terms and provisions shall continue in full force and effect.
- This Warranty shall be governed by, and construed under, the laws of the State of Florida, without reference to the conflict of laws principles thereof.
- This Warranty represents the entire agreement between Albér and User with respect to the subject matter herein and supersedes all prior or contemporaneous oral or written communications, representations, understandings or agreements relating to this subject.

Table of Contents

1.	Safety Information.....	1-1
1.1	General	1-1
1.2	Document Symbols	1-1
1.3	Safety Symbols.....	1-1
1.4	Product Safety Practices.....	1-2
2.	Preventive Maintenance	2-1
2.1	Visual Inspection.....	2-1
2.2	System Component Cleaning	2-1
2.3	Sense Lead and Ring Terminal Cleaning.....	2-1
2.4	Internal Component Replacement.....	2-1
3.	System Overview.....	3-1
4.	System Installation	4-1
5.	Materials Received List.....	5-1
6.	System Installation Considerations	6-1
6.1	Disconnect Device.....	6-1
6.2	Equipment Location	6-1
6.3	Rack Mounting.....	6-1
6.4	Mounting Options	6-1
6.5	Wire Length.....	6-1
6.6	Battery String Isolation	6-1
6.7	Cell Number 1 Identification	6-1
7.	Installation of Tab Washers.....	7-1
8.	Unit Configuration.....	8-1
8.1	Digital Input Configuration.....	8-1
8.2	RS-485 Termination.....	8-3
9.	Equipment Mounting.....	9-1
9.1	Flush Mounting Kit (Optional)	9-1
10.	Sense Lead Harness Connections	10-1
10.1	Voltage Sense Lead Connection Preparation	10-1
10.2	Systems with Dual or Multiple Positive and Negative Posts	10-3
11.	Fused Resistance Load Lead Harness Connections.....	11-1
12.	Charger Cable Resistance Reading Connection	12-1

13.	Ambient Temperature Sensor Connection	13-1
14.	Digital Inputs Connection	14-1
15.	RS-485 Communication Connection	15-1
16.	Fiber Optic Communication Connection	16-1
17.	Network Communication Connection	17-1
17.1	Network Protocols Supported	17-1
18.	Parameter Alarm Connection	18-1
19.	Hardware Alarm Connection	19-1
20.	UXIM Specifications	20-1
20.1	UXIM System Specifications	20-1
20.2	Cell Measurements	20-2
20.3	System Measurements	20-2
21.	UXIM Drawings	21-1
22.	Index	22-1

List of Figures

Figure 1 - Typical System Connection	3-2
Figure 2 - Exposed Post Tab Washer Assembly.....	7-1
Figure 3 - Recessed Post Tab Washer Assembly.....	7-2
Figure 4 - Digital Input Jumper Locations.....	8-2
Figure 5 - RS-485 Jumper Locations	8-3
Figure 6 - Optional Flush Mount Kit Mounting	9-1
Figure 7 - Voltage Sense Lead Connections to Battery.....	10-2
Figure 8 - Exposed Dual or Multiple Posts Connections.....	10-3
Figure 9 - Resistance Steps Connection to Battery.....	11-1
Figure 10 - Charger Control Sense Lead Connection to Battery and Charger.	12-1
Figure 11 - 25', 50', 75' or 100' Single and Dual Ambient Temperature Harness.....	13-1
Figure 12 - Digital Inputs.....	14-1
Figure 13 - RS-485 Connections.....	15-1
Figure 14 - Minimum Fiber Optic Bend Radius	16-1
Figure 15 - Network Connection	17-1
Figure 16 - Alarm Contacts.....	18-1
Figure 17 - Hardware Alarm Contacts.....	19-1
Figure 18 - UXIM Wiring Schematic Diagram	21-1

List of Tables

Table 1 - Installation Task List 4-1

Table 2 - Model Number Description 5-1

Table 3 - Inventory List 5-3

Table 4 - Digital Input Modes 8-1

Table 5 - Digital Input Jumper Settings 8-1

Table 6 - Cell Measurement Specifications 20-2

Table 7 - System Measurement Specifications 20-2

1. Safety Information

1.1 General

The protective features of this product may be compromised if it is used in a manner not specified in this guide and/or related operation or installation instructions. This manual describes general installation of the system. If the system has features or accessories not described in this manual, contact Albér.

The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. Albér assumes no liability for the customer's failure to comply with these requirements.






Note

- Use safety equipment when working in and around the batteries.
- Never energize the UXIM until after the installation is complete.
- Never exceed equipment voltage, power ratings or capabilities.



1.2 Document Symbols

The symbols below appear in this manual or are affixed to the Albér device. It is important to review these symbols and to understand the type of instructional information they convey.

 Warning	Highlights areas related to user safety. Calls attention to a procedure, practice, or condition which, if not correctly followed, could result in personal injury. Do not proceed beyond a WARNING symbol until the indicated conditions are fully understood and met. Always observe safety information when installing, setting up or operating this product.
 Caution	Highlights areas related to product or data safety. Calls attention to an operating procedure or condition which, if not correctly followed, could result in damage to the product or permanent loss of data. Do not proceed beyond a CAUTION symbol until the indicated conditions are fully understood and met.
 Note	The Note symbol calls attention to important information. Describes additional information to help the user.

1.3 Safety Symbols

The following symbols may appear on the system or individual equipment.

	Important Information; refer to this guide.
	Functional earth terminal.

1.4 Product Safety Practices

The following describe safety practices particular to the installation or operation of the product.

Equipment Service

Proper installation and testing are essential to the correct functioning of the system. If you have questions, contact Albér and request monitor assistance. Except as explained in this manual, do not attempt to service Albér equipment.

Any adjustment, maintenance or repair of this product must be performed by qualified personnel. Contact an Albér customer service engineer and request assistance. Only qualified and trained personnel may perform the operations described in this manual. All safety information must be read, understood, and strictly adhered to before installing, powering up or using the equipment or software (the "system".)

Equipment Operation

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. Refer to this manual for the correct connection and usage of this equipment.

Fuses

For continued protection, fuses with the required rated current, voltage, and type, such as normal, slow blow, fast blow or time delay, must be used.

Equipment Access

Operating personnel must not remove equipment covers, shields or panels. Component repair, replacement, and internal adjustments must be made only by qualified service personnel.

Operating Damaged Equipment

Do not operate damaged equipment. Equipment that appears damaged or defective must be made inoperative and secured against unintended operation until repaired by qualified service personnel. Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture or any other reason, remove power and do not use the product until safe operation can be verified by qualified service personnel. If necessary, contact Albér to ensure the safety features are maintained.

Servicing and Adjusting

Do not service or adjust alone. While in the battery circuit, do not attempt internal service or adjustment of this equipment unless another person, capable of calling for or rendering first aid and resuscitation, is present.

Substituting Parts or Modifying Equipment

Do not substitute parts or modify equipment. Due to the possibility of introducing additional hazards, do not substitute parts or perform any unauthorized modification to the product. If necessary, contact Albér to ensure the safety features are maintained.

Insulation Rating For Wires

Use only wire supplied with the installation kit.

Ventilation

Never block equipment ventilation ports or openings. The equipment must have adequate ventilation to prevent overheating. Ensure equipment is operated within specified temperature and humidity ranges.

2. Preventive Maintenance

This section describes preventive maintenance for the UXIM system.

2.1 Visual Inspection

Visually inspect all monitor system components for damaged or frayed power cords and cables and for damaged component panels, controls, and connectors. When damage is detected, remove the equipment from service until the damage is repaired.

2.2 System Component Cleaning

Clean system components using a soft cloth. Do not use commercial or industrial cleaners that may attack the computer display and housing. Never expose the computer or system components to water, high humidity or dampness.



Warning: Before cleaning equipment, ensure the system is disconnected and power to the units has been shut off. You must disconnect the system components and the monitor system cabinet, if a cabinet is being used, from AC and/or DC power sources.

2.3 Sense Lead and Ring Terminal Cleaning

On some applications, cleaning the sense leads where they connect to the battery may be necessary. This is normally needed when monitoring flooded batteries because electrolyte can drip or splash onto the sense lead connections. Sense leads exposed to electrolyte must be neutralized. Follow the battery manufactures recommendations for cleaning battery connections.

2.4 Internal Component Replacement

The monitor system has no user replaceable components. Since high voltage exists in most of the system components, only knowledgeable users should remove the covers from components. Failure to comply with this restriction could pose a safety hazard and/or void the product warranty.

3. System Overview


The Universal Xplorer Industrial Monitor (UXIM) is a stationary battery monitor designed for use in Industrial or Utility applications. With standard configurations specifically designed for Utility Substations, make it ideal for NERC compliancy. Each monitor is considered a stand-alone system, in that no external computer is required for normal operation with standard provisions to integrate to customer owned Building Management or Enterprise Systems.

Complete and comprehensive remote monitoring capabilities include features you expect.

- Remote access via Ethernet or RS-485 using industry standard protocols such as Modbus or SNMP for simple BMS integration.
- Embedded Web servers permit Web browsing from any PC on the network for quick real-time battery viewing to inspect data in easy to interpret graphical views for all cell and string level parameters, active monitor status and state of active or latched alarms.
- Embedded email clients for alarm notifications and data delivery of battery parameters (XML format) with priority handling of message sent to responsible service technicians.
- Local service port USB connectivity to view and analyze battery systems using laptop computers.

With the UXIM, all your battery parameters are measured and constantly monitored against user defined thresholds. And what sets Albér monitors apart from others is the ability to provide early warning of potential battery problems by performing a proactive, patented resistance test, a proven technology to reliably predict battery performance. To complement the proactive resistance test, other parameters monitored to ensure optimal battery performance and battery life are as follows:

- Cell Level Measurements
 - Individual Cell Resistance
 - Individual Cell Voltage
 - Individual Intercell Resistance
 - Electrolyte Level (Optional)
- System Level Measurements
 - Overall Volts
 - String current (Discharge/Float)
 - Ripple Current
 - Ambient Temperatures
 - Charger Cable Resistance
 - Ground Fault Currents

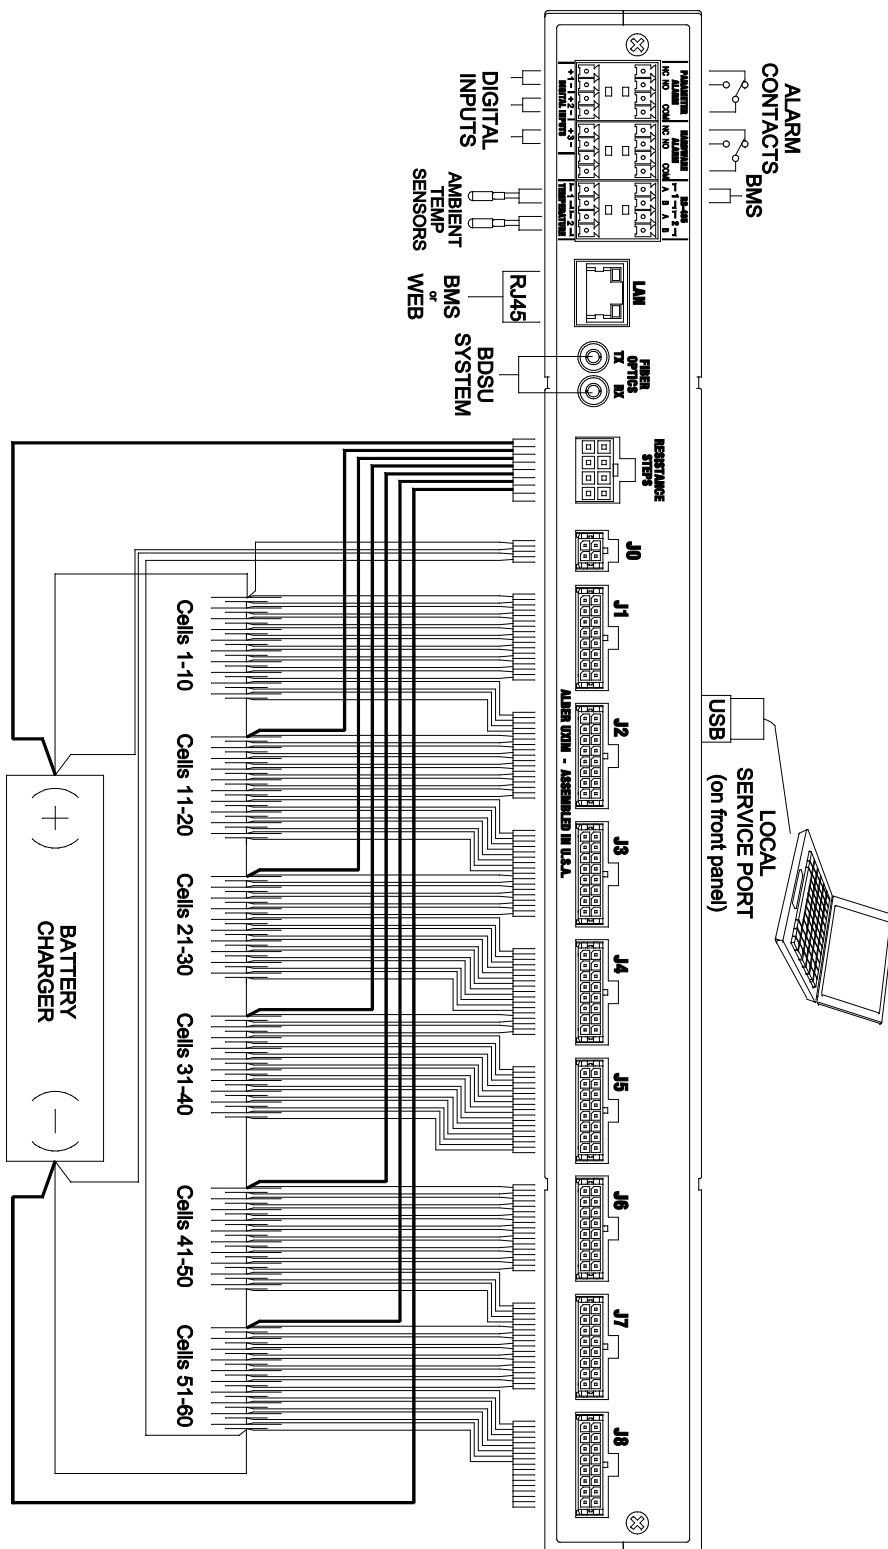

4. System Installation



Note: The UXIM must be installed in a restricted access location.

UXIM installation requires nothing more than standard hand tools, cutters, strippers and screwdrivers. If the unit is to be wall mounted, a drill will also be required.

The following is a list of the steps required for successful UXIM system installation. Some items may not apply due to system requirements.

Installation Task	Refer to Section
Verify materials ordered and received	Materials Received List, page 5-1
Items to consider before system installation	System Installation Considerations, page 6-1
Isolate the battery string	Battery String Isolation, page 6-1
Identify cell/monobloc Number 1	Cell Number 1 Identification, page 6-1
Properly install the tab washers	Installation of Tab Washers, page 7-1
Configure the unit	Unit Configuration, page 8-1
Mount the equipment	Equipment Mounting, page 9-1
Connect the sense lead harnessing	Sense Lead Harness Connection, page 10-1
Connect the fused load lead harnessing	Fused Resistance Load Lead Harness Connection, page 11-1
Connect the ambient temperature sensor	Charger Cable Resistance Reading Connection, page 12-1
Connect the digital inputs if applicable	Digital Inputs Connection, page 14-1
Connect RS-485 communications if applicable	RS-485 Communication Connection, page 15-1
Connect the fiber optic interface if applicable	Fiber Optic Communication Connection, page 16-1
Connect the Network communications if applicable	Network Communication Connection, page 17-1
Connect the alarm contacts if applicable	Parameter Alarm Connection, page 18-1
Connect the Hardware alarm contacts if applicable	Hardware Alarm Connection, page 19-1

Table 1 - Installation Task List



5. Materials Received List

The following is a list of material that may have been received with your shipment. Refer to the packing slip delivered with the equipment for a complete list of materials supplied. Alber suggests you inventory all materials to ensure the order is complete. Report any shortages to Alber immediately.








The model number is in the format of PPPP-COB, where PPPP is 1010 and C, O, and B are described below.

PPPP–	C	O	B	Description	Choices
1010	C			Communications	0 = RS-485 Only 1 = Network 2 = Fiber Optic 3 = Network and Fiber Optic
1010		O		Options	0 = None 1–9 = Reserved
1010			B	Branding	0 = OEM 1–9 = Reserved

Table 2 - Model Number Description

Part Number	Photo/Drawing	Description
1010-### ###= (options)		UXIM Battery Monitor module One module per system
1102-550-25 1102-550-50 1102-550-75 1102-550-100		25', 50', 75' or 100' Pulsed Load Lead harness One pulsed load lead harness per system

Materials Received List (continued)

Part Number	Photo/Drawing	Description
1102-553-25 1102-553-50 1102-553-75 1102-553-100		25', 50', 75' or 100' Single Ambient Temperature Sensor harness One single ambient Temperature sensor harness per system
1102-554-25 1102-554-50 1102-554-75 1102-554-100 (Optional)		Or optionally, a double ambient temperature sensor can be ordered. Contact your Alber Sales representative for details. 25', 50', 75' or 100' Double Ambient Temperature Sensor harness (optional) One ambient temperature sensor per system
1102-560-25 1102-560-50 1102-560-75 1102-560-100		25', 50', 75' or 100' Sense Lead harness Eight sense lead harnesses per system
2025-108		USB cable One USB cable per system
1102-551		Fused Load Lead assembly Seven fused load lead harnesses per system
4301-015		Fuse, 15A Slo-Blo (MDA-15-R) Seven 15A Slo-Blo fuses per system
1102-552-25 1102-552-50 1102-552-75 1102-552-100		25', 50', 75' or 100' Charger Sense Lead harness One charger sense lead harness per system

Materials Received List (continued)







Part Number	Photo/Drawing	Description
1102-555		10K 0.1% Resistor Sense Lead Assembly 136 resistor sense leads per system
2120-164		Single Tab Washer (5/16") 140 tab washers per system
2027-029		UXIM Configurator Software installation CD
KIT 1400-531		Flush mounting kit (Optional) Contact your Alber Sales representative for details.
3703-006		25' Fiber Optic Cable Communication link between units
KIT-3703-015		Fiber Optic Polishing Kit The kit provides the user with polishing materials to terminate the ends of plastic optical fiber correctly.

Table 3 - Inventory List

6. System Installation Considerations

This section describes items that should be considered before installing the UXIM system.

6.1 Disconnect Device

The Pulsed Load Lead harness which plugs into the Resistance Steps connector is the primary disconnect device. Unplug this connector to disconnect power from the UXIM.

6.2 Equipment Location

Consider the placement of the equipment in the event service is required. For example, access to the rear of the equipment or visual access to the status lights may be needed. The equipment is convection cooled and no cooling fans are used. To maintain proper operating temperature, the equipment must not be enclosed in another cabinet without proper ventilation.

6.3 Rack Mounting

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature specified in the Product Description Guide. Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised. Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

6.4 Mounting Options

The equipment can accommodate two types of mounting: 19" rack mount or flush mount. Standard mounting is 19" rack mounting. If the flush mount option is used, the optional flush mounting brackets will need to be installed.

6.5 Wire Length

All harnesses lengths are standard 25' or 50' length and in most cases, should not require additional lengths. Distances between the battery, battery charger and the battery monitoring equipment should be considered. If longer harness lengths are required, harnesses are available in a maximum of 50' lengths. The resistance load test-wiring limits this length to the maximum distance the UXIM can be mounted from the battery string. This manual describes all harnesses at the standard 25' or 50' length.

6.6 Battery String Isolation

Isolate the battery string prior to installing the system.

Important! Never attempt installation on a battery string that is in service and not fully isolated from the DC bus and load circuits.

6.7 Cell Number 1 Identification

When referring to any material in this installation guide and reference is made to an actual cell number, always consider Cell 1 as the most positive end of the battery with respect to the battery charger. As the cells increment toward the negative end of the string, increment the cell numbers as well.

7. Installation of Tab Washers

Tab washers allow connection of the monitoring system to the battery. Standard tab washers accommodate 5/16" hardware. The tab washer location and quantity depend on the system configuration. The actual placement of these tab washers in relation to the battery post and existing hardware is critical. In instances where a single load tab washer and a sense tab washer(s) is required, the load tab washer should be placed closest to the cell post and underneath the sense tab washer. The following figures illustrate some common applications.

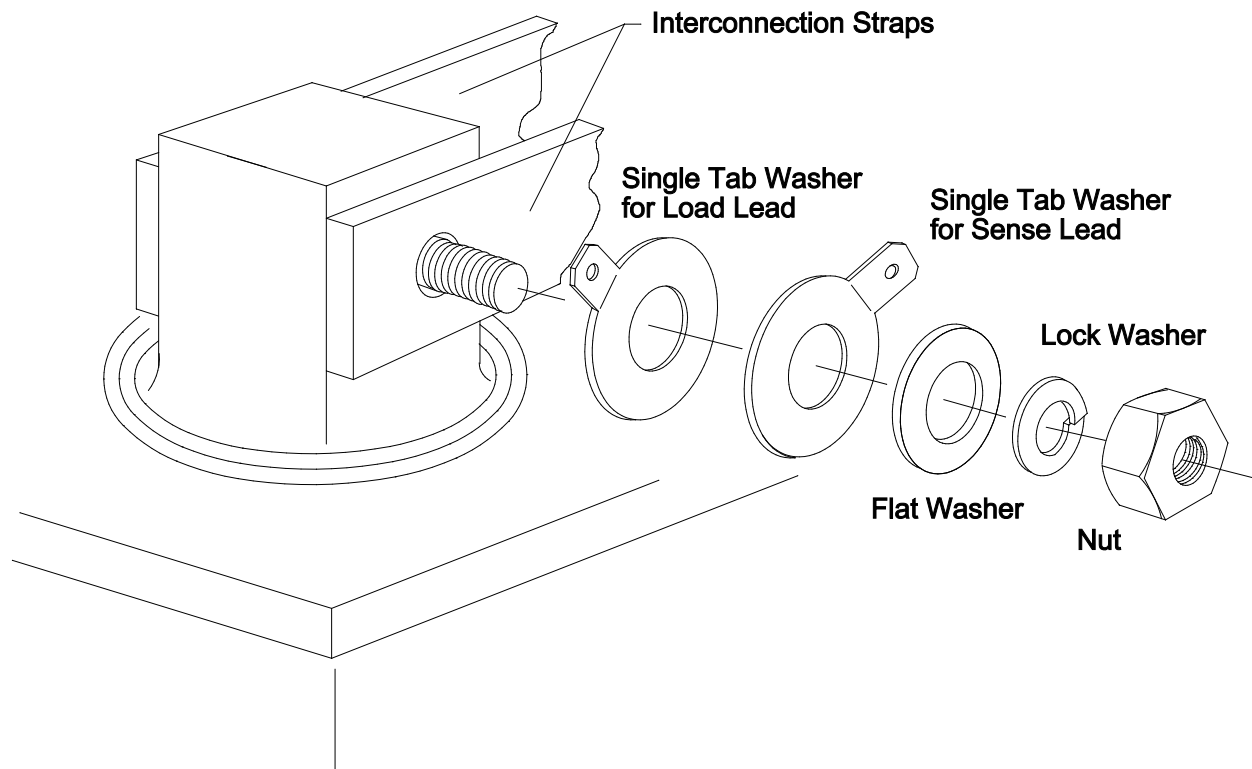


Figure 2 - Exposed Post Tab Washer Assembly

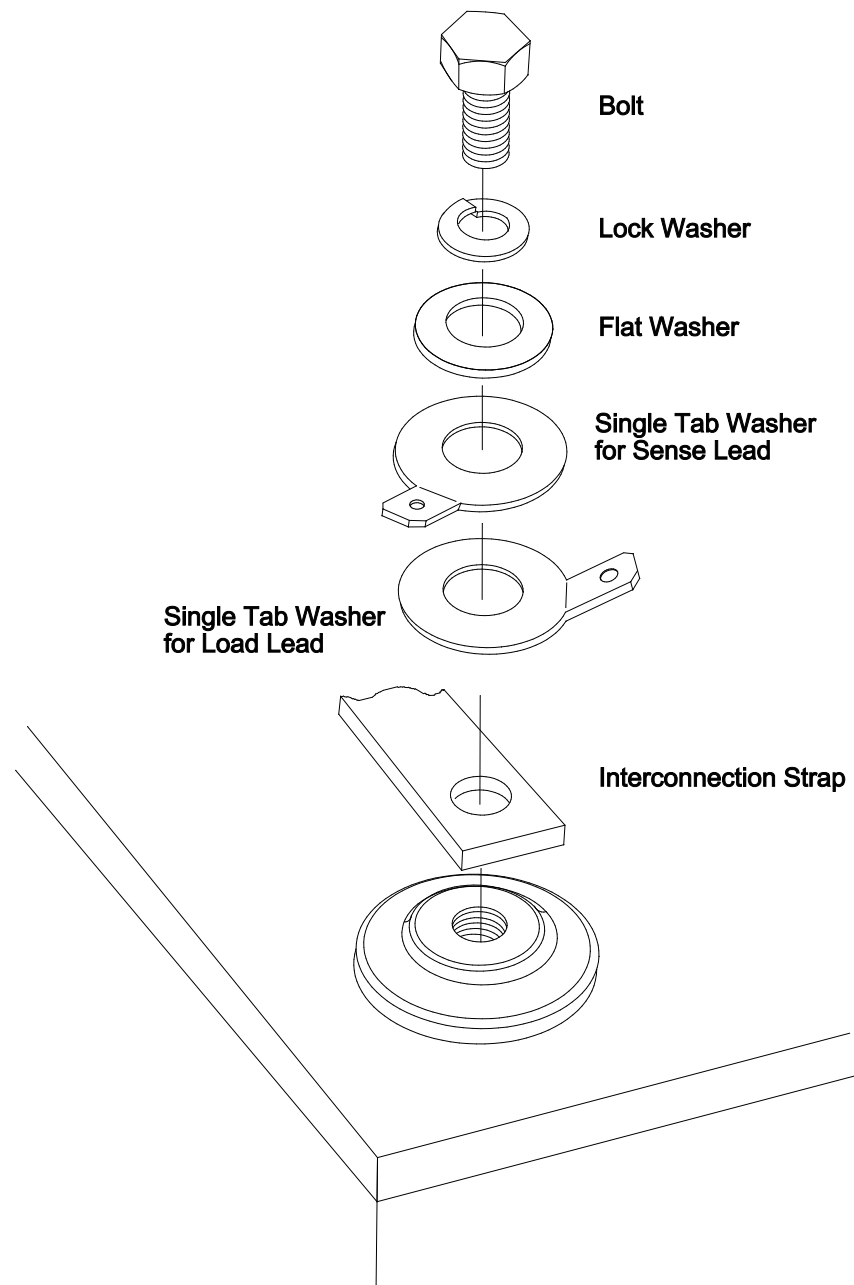


Figure 3 - Recessed Post Tab Washer Assembly

To determine tab washer placement, refer to the Configuration Connection Diagram in the back of this manual. Locate the desired configuration that will be installed. Using the wiring diagram, install the appropriate tab washer(s) on each required post.

8. Unit Configuration

8.1 Digital Input Configuration

Each digital input can be configured either for a voltage or contact closure input. Refer to the table below.

Note: Digital input configuration should only be performed by a qualified technician. Contact Technical Support for details.

Mode	Acceptable Input Range
Voltage	> 4V = False < 1V = True Maximum nondestructive input: 60Vdc
Open/Close Contact	< 2K = True

Table 4 - Digital Input Modes

Seven jumpers for digital input and one jumper for RS-485 are supplied with the UXIM for configuration. There is a pair of 2-pin jumpers associated with each digital input, which must be set according to the mode desired. The cover of the unit must be removed to gain access to these jumpers. Jumpers should only be changed by a certified Alber technician. Refer to the following table and drawing to identify what mode is required and where the jumpers are located.

Channel	Mode	Jumpers
Digital Input 1	Voltage	JP2 and JP3 are not installed
	Open/Close Contact	JP2 and JP3 are installed
Digital Input 2	Voltage	JP4 and JP5 are not installed
	Open/Close Contact	JP4 and JP5 are installed
Digital Input 3	Voltage	JP6 and JP8 are not installed
	Open/Close Contact	JP6 and JP8 are Installed

Table 5 - Digital Input Jumper Settings

The location of the jumpers is shown in the figure below. The factory does not have the jumpers inserted.

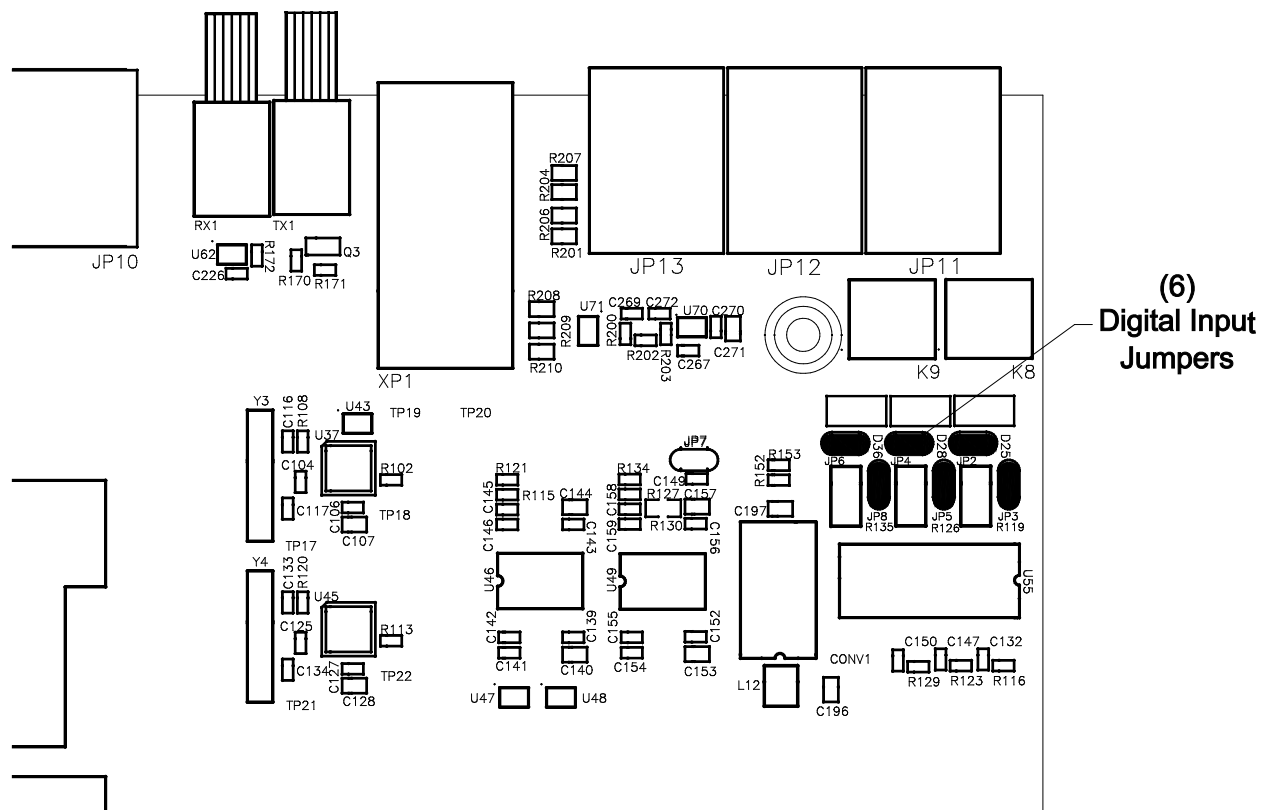


Figure 4 - Digital Input Jumper Locations

8.2 RS-485 Termination

A jumper on the circuit board is used for selecting a termination resistor for RS-485 connection. In most cases, RS-485 termination is not necessary because maximum baud rate is 19200 bps (default is 9600). RS-485 termination is recommended when intermittent communications occur. RS-485 termination is enabled when the jumper is across Pins 1 and 2 of JP7 (not the factory default setting). It is disabled when the jumper is removed across Pins 1 and 2. The location of the jumper is shown in the figure below.

Note: The factory default setting will not include the jumper inserted across Pins 1 and 2 of JP7.

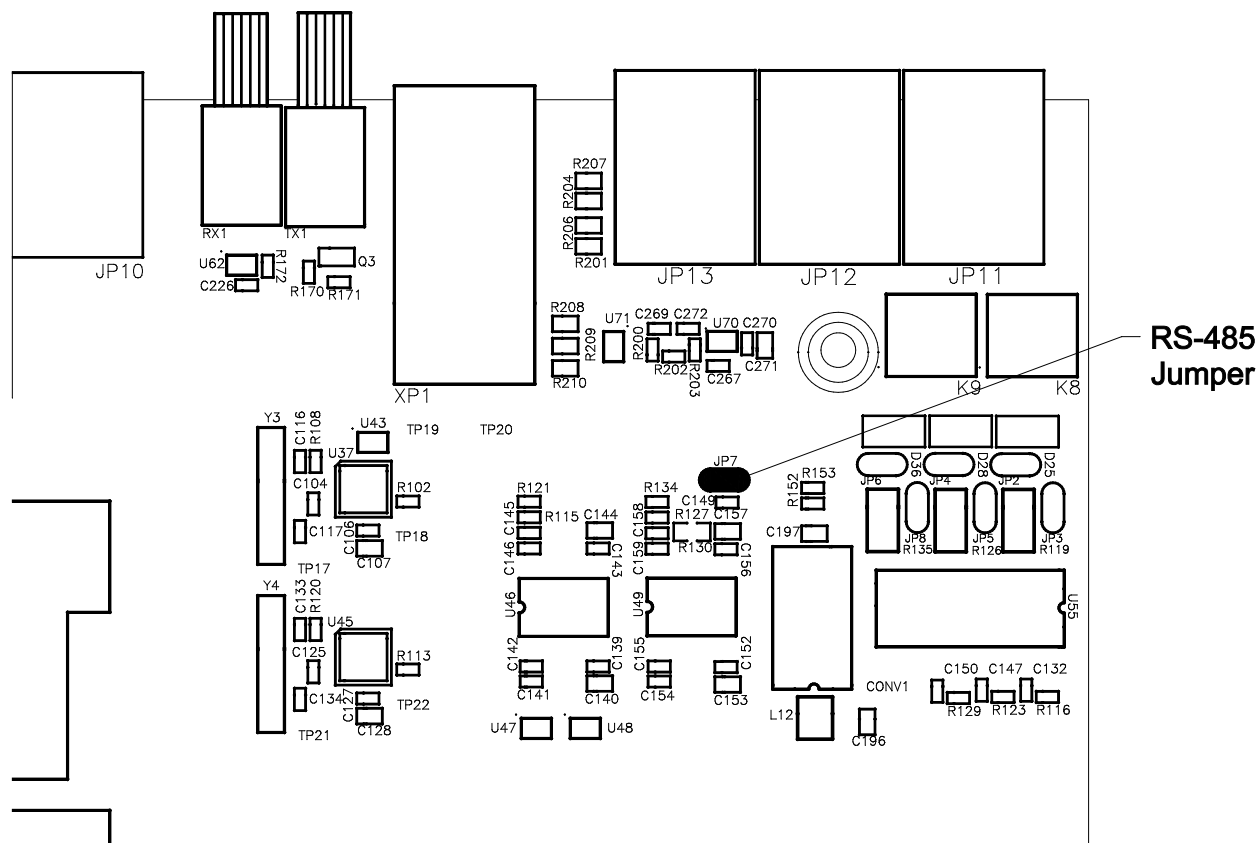


Figure 5 - RS-485 Jumper Locations

9. Equipment Mounting

The equipment can accommodate two types of mounting: 19" rack mount or flush mount. Standard mounting is 19" rack mounting. For 23" rack mounting, 1U rack reducing brackets are commercially available and would be required.

9.1 Flush Mounting Kit (Optional)

If the flush mount option is required, optional angle brackets will need to be installed on each side of the unit. To connect the flush mount brackets to the unit, remove the two screws on each side that secure the rack mount brackets to the unit. Install the supplied front spacer brackets using the top mounting hole and the flat head screws from the rack mount bracket. Remove the lower flat head screw from the rear spacer bracket. Secure the flush mount bracket through both the bracket and bracket spacer using the rack mounting kit-supplied pan head screws at both the front and rear locations for each side. Flush mounted equipment footprint is shown below.

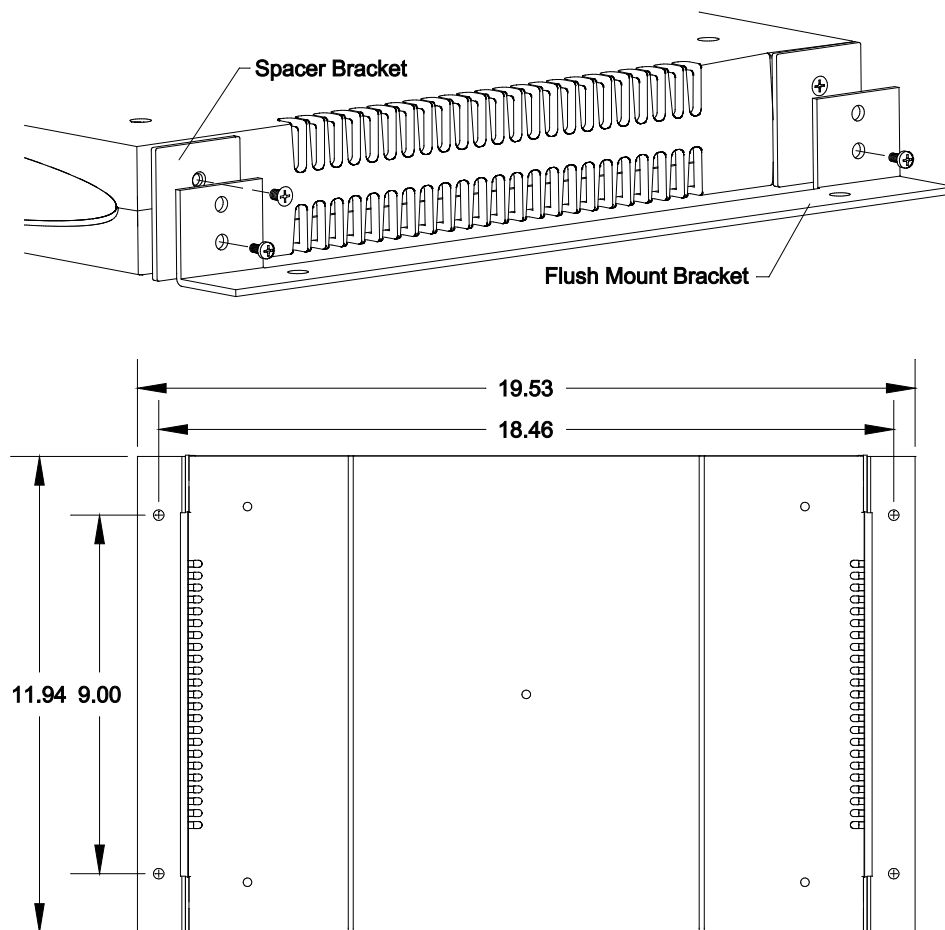


Figure 6 - Optional Flush Mount Kit Mounting

10. Sense Lead Harness Connections

Refer to the Wiring Schematic Diagram located at the rear of this manual to determine the routing path from each Sense Lead harnesses' connection point (J1-J8) on the equipment to the required cell voltage sense point on the battery. Note that wires terminating on a positive post are solid colors. Wires terminating on negative posts are white with colored stripe. For ease of future cell maintenance, leave some slack in the wiring to the cells. A write-on label is provided on each harness to mark the correct harness assembly number to appropriate equipment connector location of the harness. If the connections are removed for maintenance, the labels on the harness will be a useful reference to reconnect the cables to the correct connector. Refer to the following steps to install the proper termination to each battery connection point.

10.1 Voltage Sense Lead Connection Preparation

In order to prepare the sense lead harness connection, follow these steps:

1. Each voltage sense lead wire from the sense lead harnesses must have a 10K Ω 0.1% flameproof resistor sense lead assembly installed before connection to the tab washer.
2. After determining the routing path and required wire length from the equipment to the connection point, begin assembling the 10K resistor sense lead assembly to the sense lead harnesses by cutting each wire to the required length and strip the wire at approximately ¼" of the insulation from the end of the wire.
3. Place the stripped wire into the butt-splice of the 10K Ω 0.1% resistor sense lead assembly.
4. Place the wire and insulated section of the butt-splice into the first die of the Panduit crimper, making sure that the intersection is centered within the die.
5. Crimp the connection.
6. Check the crimped connection to make sure it is secure and holds well.
7. Connect the completed voltage sense lead to its appropriate cell sensing point tab washer.

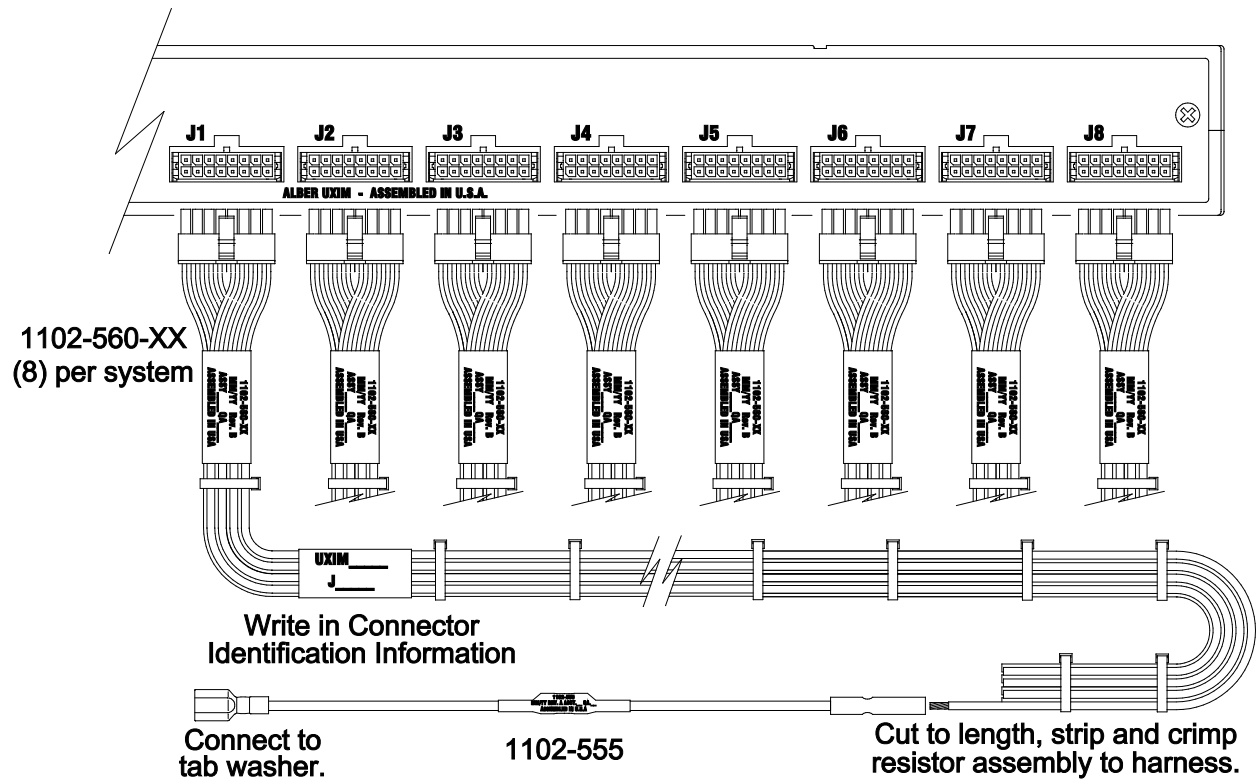


Figure 7 - Voltage Sense Lead Connections to Battery

XX= cable length

Caution: When a load lead wire connects to the same point as a voltage sense lead, the load lead wire must be the closest to the cell's post. Verify the fuse is a 15A Slo-Blo.

10.2 Systems with Dual or Multiple Positive and Negative Posts

Systems that use dual or multiple positive and negative post interconnections require connection of the sense lead harness using the following guidelines. The positive sense lead wires (solid colors) and negative sense lead wires (white with colored stripe) of the harness attach to the corresponding positive and negative terminals of the battery in a way that will monitor as many strap connections as possible. To achieve optimum results, it is recommended that sense leads should be connected as described in the Figure below and duplicated at each cell for consistent readings. The following illustration shows a scenario of dual and/or multiple positive and negative posts as described.

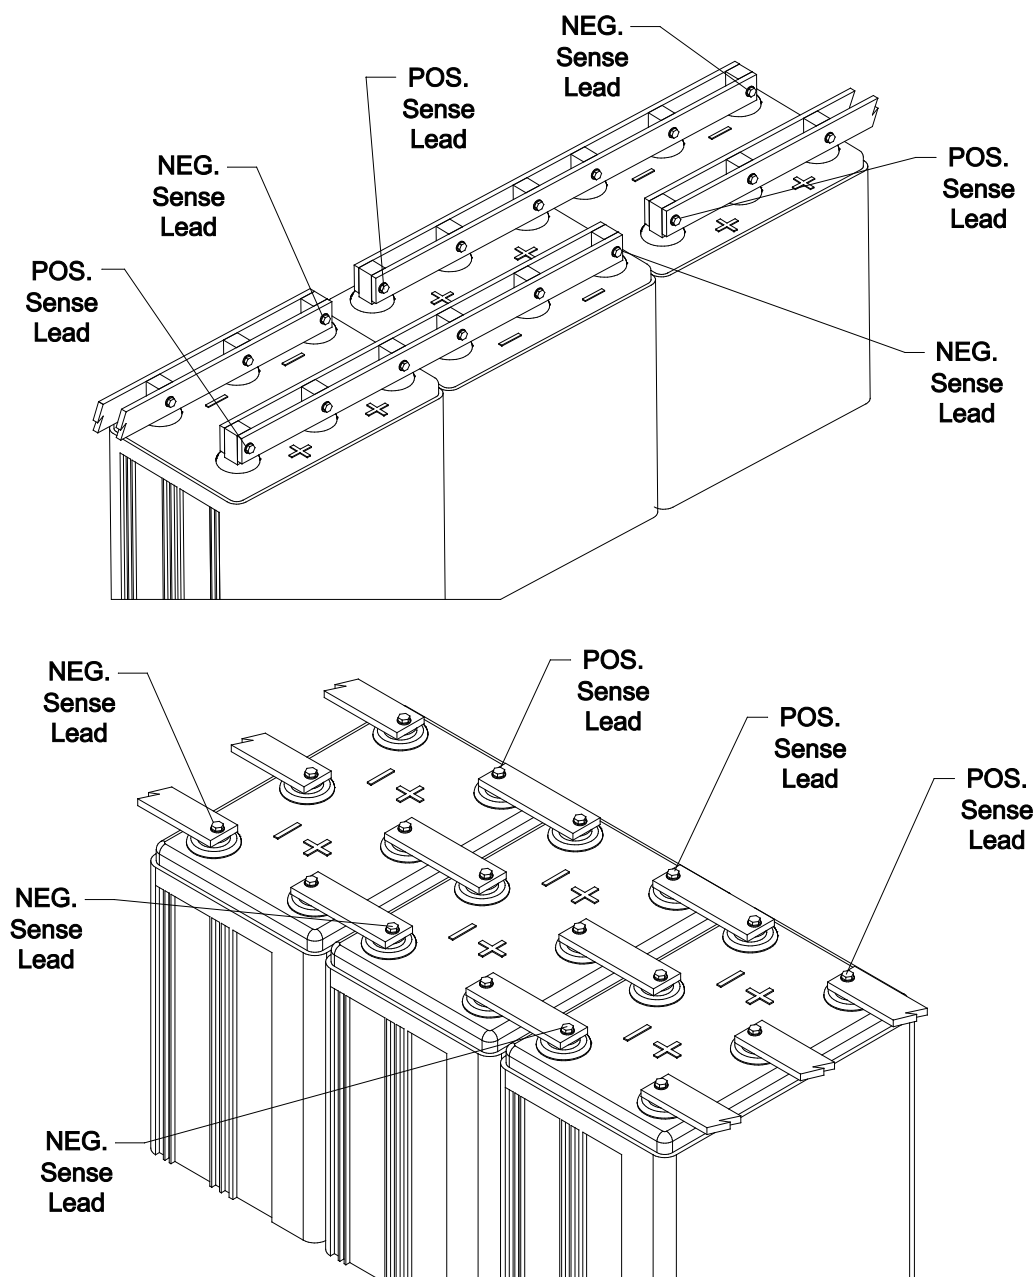


Figure 8 - Exposed Dual or Multiple Posts Connections

11. Fused Resistance Load Lead Harness Connections

There is a maximum of seven load connections available. To identify connection locations, refer to the Resistance Steps section of the UXIM Wiring Schematic drawing at the back of this manual. This drawing shows exact locations where these cables connect to the battery for each supported configuration.

Warning: Before making any connections to the battery, verify the fuses are not installed in the load lead fuse holders. Do not install the fuses until the time that the entire system is commissioned.

Each Resistance Load cable assembly is made up of seven color-coded load wires to distinguish each resistance load step for proper termination at the battery. From the UXIM, the Resistance Load cables are routed to the installation location and cut to the appropriate length. For ease of future cell maintenance, leave some slack in the wiring to the cells. The wire should be stripped to remove approximately 5/16" of insulation and crimped into the butt splice on the Fuse Holder Assembly. When connecting to the charger bus, it may be required to replace the 10K resistor leads and or load lead's faston™ terminal with a ring terminal to complete connection to the bus. Proper location and crimp termination of these cables are critical and could cause equipment failures if done improperly.



Note: When installing load lead cables, cut them to the appropriate length. Do not coil these cables. Failure to cut cables to the correct length could result in inaccurate readings.

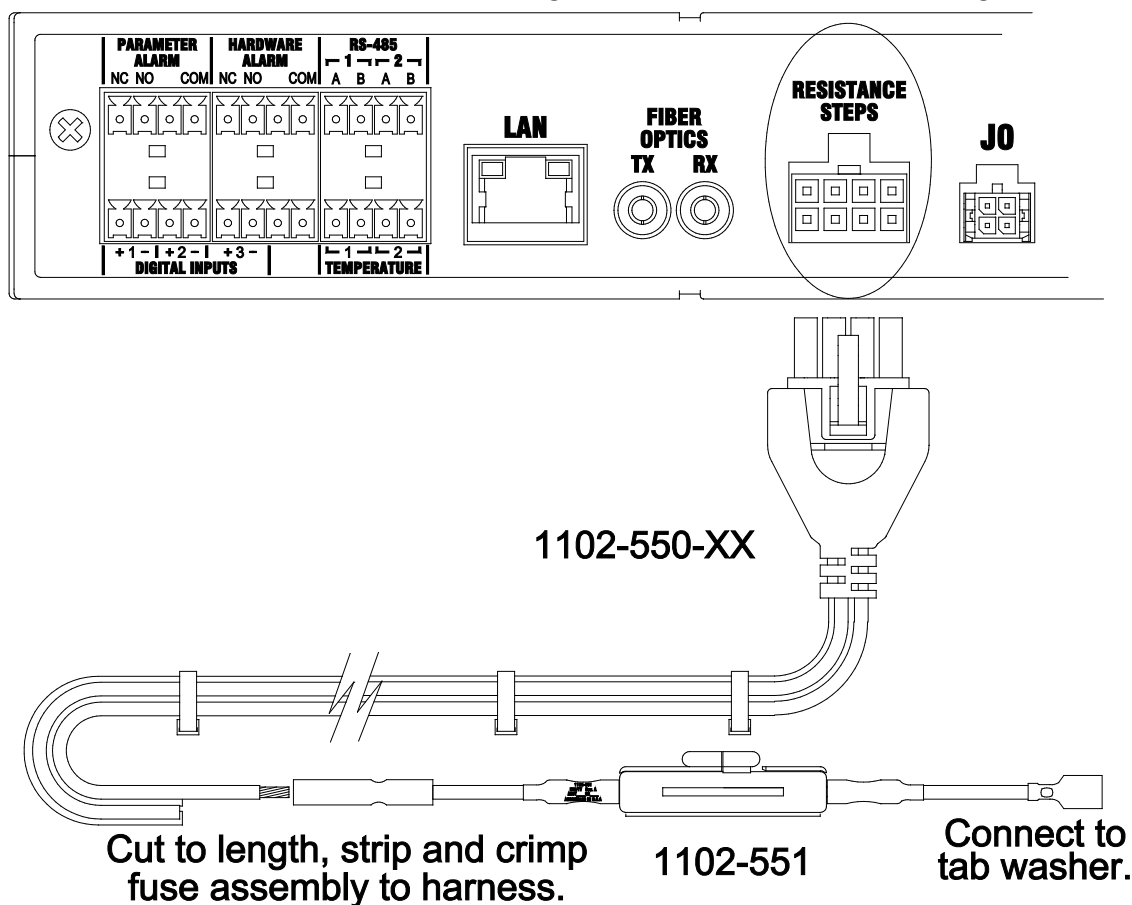


Figure 9 - Resistance Steps Connection to Battery

The fused load lead will be positioned on a single tab washer. In situations where there are sense and load leads at the same location, it is critical that the load connection be placed closest to the battery post. Before installation on the tab washer, verify that the fuse is not installed. The fuse will be installed at time of startup.



Note: It is very important that the load connection is the closest connection to the post if two tab washers are used. Failure to do this could result in inaccurate resistance readings.



Caution: Connecting the load wires incorrectly could cause an equipment failure if a resistance test is performed. Such failures are not covered under warranty.



Warning: Do not install load lead fuses until instructed to do so in the Getting Started Guide.

12. Charger Cable Resistance Reading Connection

There is one 25', 50', 75' or 100' Charger Cable Resistance Reading harness included with each unit. From the UXIM, the Charger Cable Sense Lead cables are routed to the installation locations shown in the diagram below. After determining the routing path and the required wire length from the equipment (J0) to the connection points, begin assembling the 10K resistor sense lead assembly to the charger sense lead harness as described in Section 10.1. When connecting to the charger bus, it may be required to replace the 10K resistor leads and or load lead's faston™ terminal with a ring terminal to complete connection to the bus. Proper location and crimp termination of these cables are critical and could cause equipment failures if done improperly.


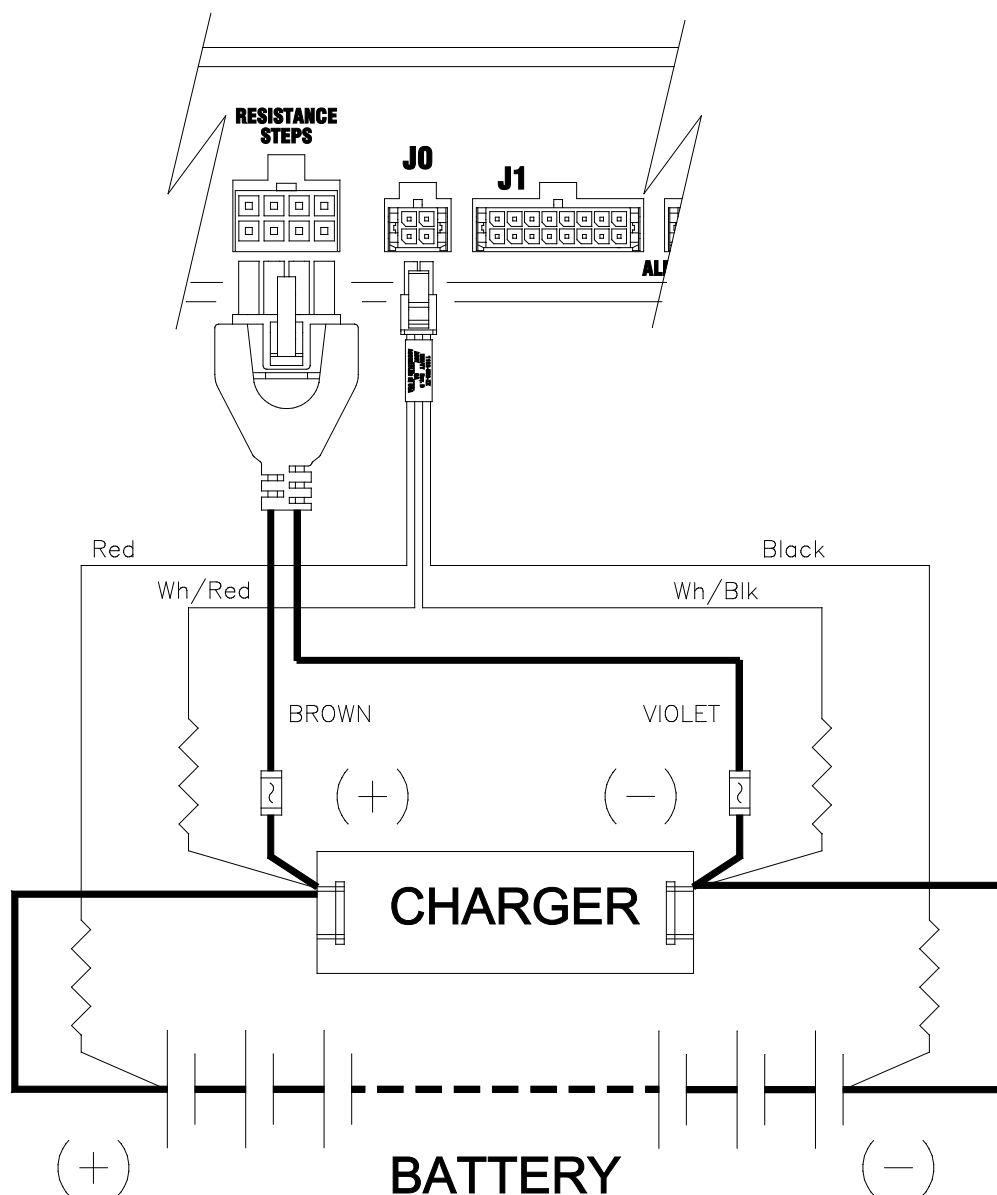


Figure 10 - Charger Control Sense Lead Connection to Battery and Charger.

13. Ambient Temperature Sensor Connection

There is one ambient temperature sensor included with each unit. This sensor comes with a prefabricated harness with 25', 50', 75' or 100' of cable. Route the cable to the desired location to capture ambient room temperature and plug the connector into the rear of the unit.

Note: The UXIM device comes with one single temperature harness. A dual harness can be purchased through your Alber Sales representative. Either a single or dual harness can be used on the UXIM.

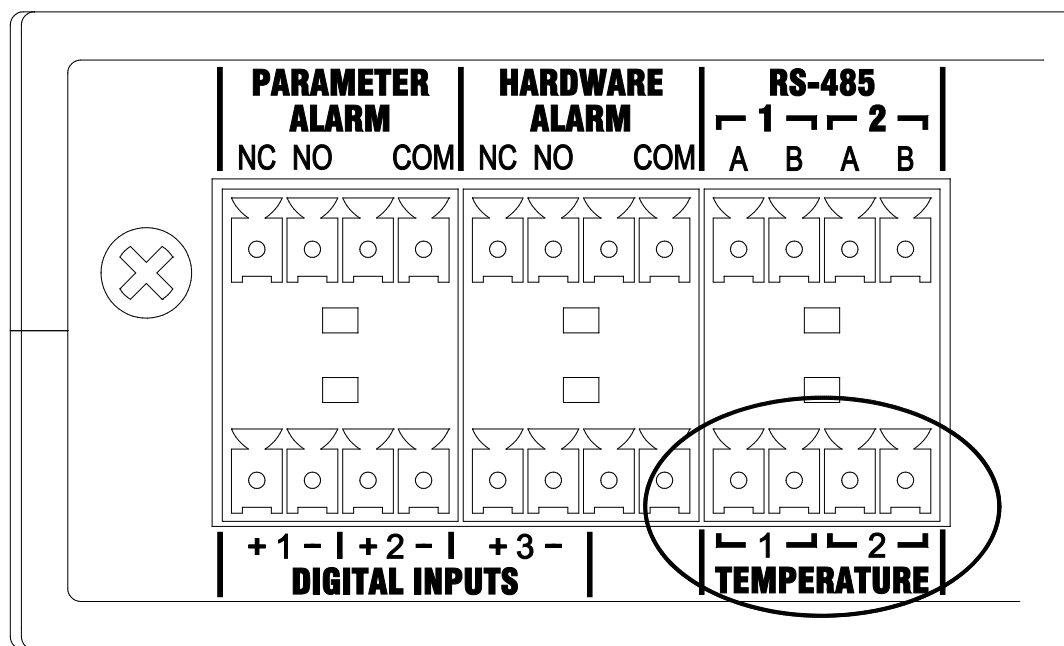

1102-553-XX (Standard)



1102-554-XX (Optional)

Figure 11 - 25', 50', 75' or 100' Single and Dual Ambient Temperature Harness

14. Digital Inputs Connection

There are provisions for three separate digital inputs. These can be configured to operate in two different ways. Refer to Digital Input Configuration section on page 8-1 for configuration details. To connect the device monitored, connect to one of the three inputs located on the rear of the unit. If only a switch "open/close contact" mode is being used, then polarity is not important. However, if a voltage source is being used, then the polarity will need to be correct.

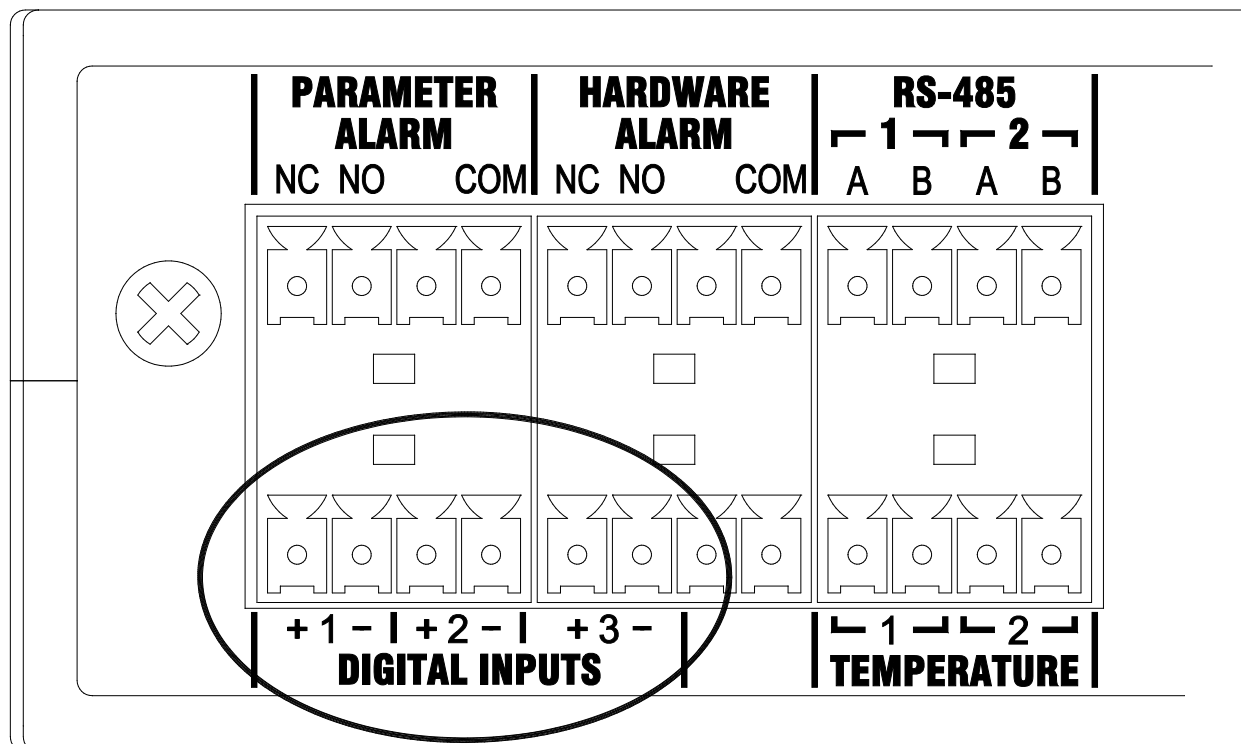


Figure 12 - Digital Inputs



Caution: Pay close attention to polarity and voltage when making these connections. Connecting the digital inputs polarity backwards or exceeding 60Vdc in voltage mode will damage the equipment.

15. RS-485 Communication Connection

There are two RS-485 ports available for communications between the UXIM and remote controllers (BMS) or accessory modules (not currently supported). Each of these ports is labeled 1 and 2. When connecting to a remote controller, connect the A & B connection of port 1 to the remote controller. When multiple units are used together and need to be connected to a remote controller, these modules can be networked together using the RS-485 (1) terminals A & B. See the figure below.

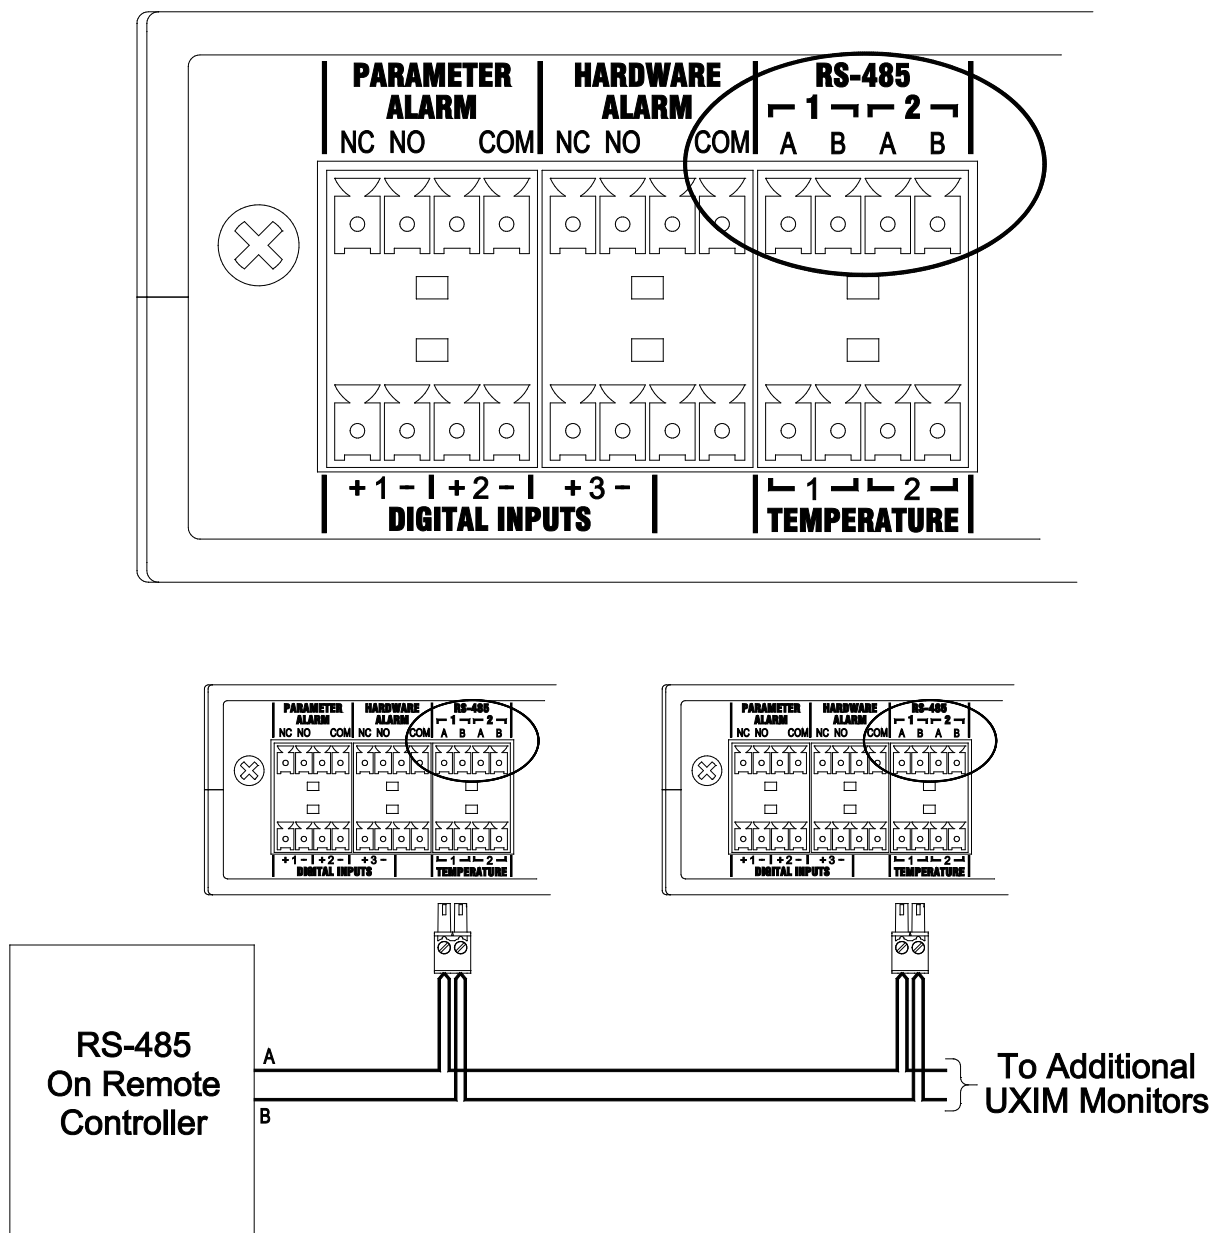


Figure 13 - RS-485 Connections

16. Fiber Optic Communication Connection

The Fiber Optic ports are an optional communications port used to connect to a BDSU Linker module - UXCM. When integrated with a UXCM, the UXIM will inherit a host of advanced features outlined in the BDSU Product Description Guide.

To connect to a UXCM, use the supplied fiber optic cable (if option is installed) and connect the TX of the UXCM to the RX of the UXIM and then the TX of the UXIM to the RX of the UXCM.

When cutting the fiber optic cable to length, the ends must be properly cut and polished to achieve reliable communications. Follow the instructions supplied with the polishing kit.

When routing and terminating the fiber optic cable, the following should be considered.

- The minimum bend radius should not be less than 35mm or 1.4"
- The maximum length between modules cannot exceed 250' or 76 meters. Exceeding 250' will cause degradation in the signal which will manifest itself as intermittent or no communications.

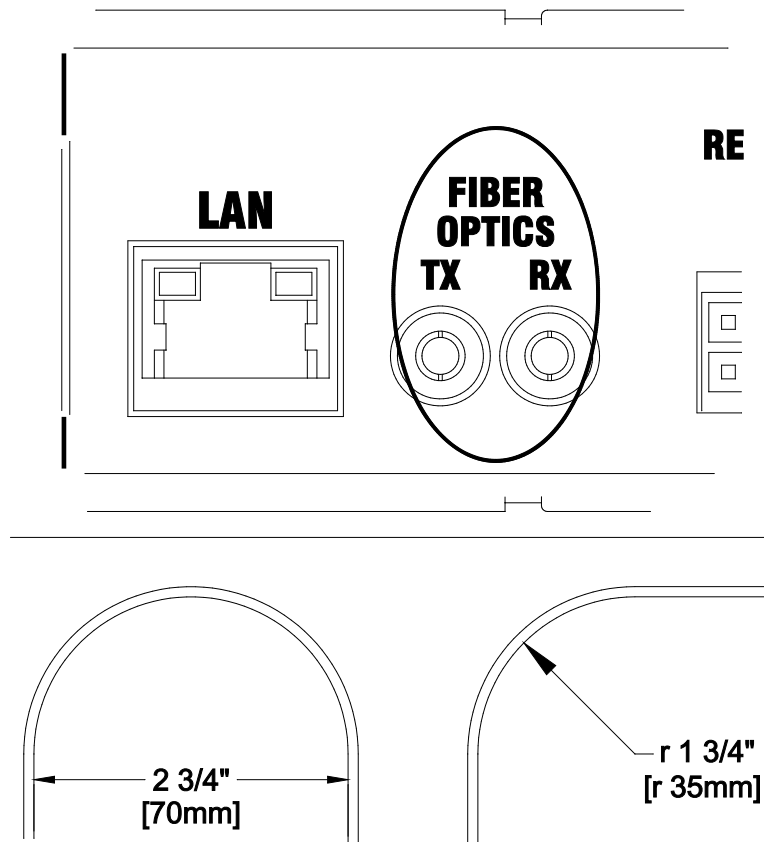


Diagram Not To Scale

Figure 14 - Minimum Fiber Optic Bend Radius

17. Network Communication Connection

The LAN network connector allows the UXIM to be connected to a Ethernet network. From an existing network, connect the network cable to the LAN connector on the UXIM.

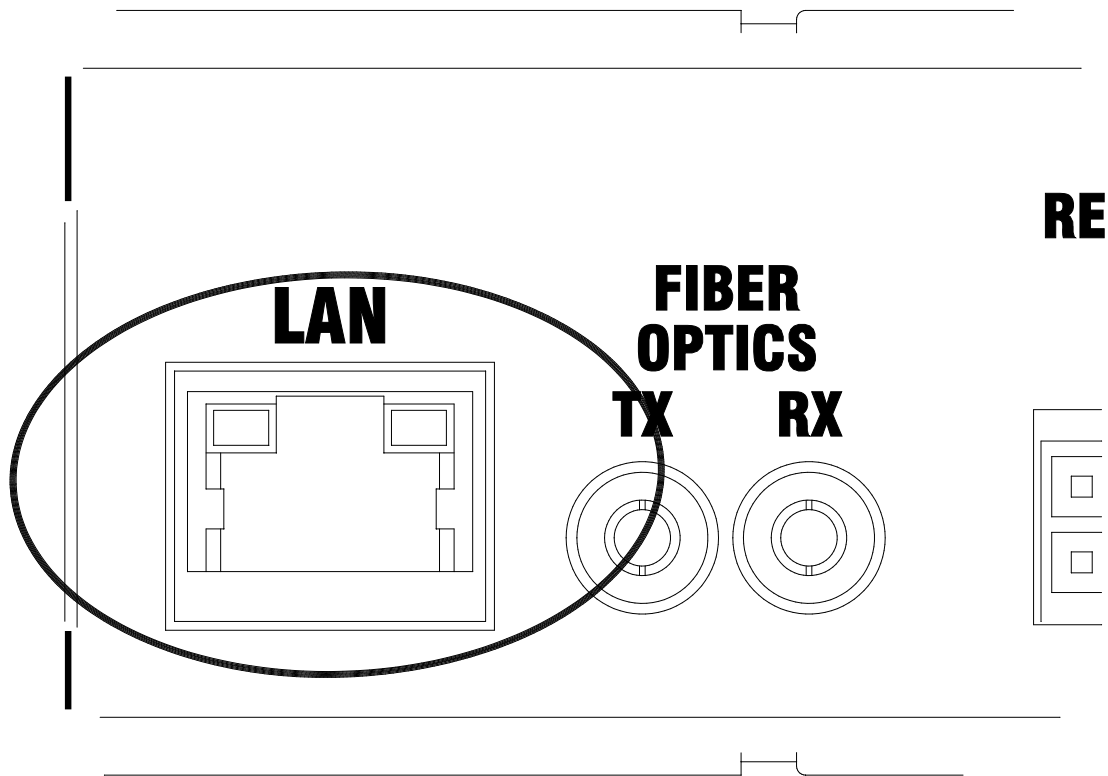


Figure 15 - Network Connection

17.1 Network Protocols Supported

There are several protocols supported by the network interface and will require specific ports to be opened up on the network. The following lists the supported protocols that can be used:

- TCP 502 (Modbus)
- TCP 3002 (Application debug port)
- TCP 9999 (Telnet setup)
- TCP 10001 (TCP to serial pass through)
- UDP 69 (TFTP), only to load code updates
- UDP 161 (SNMP)
- UDP 162 outbound (SNMP traps)

18. Parameter Alarm Connection

The Parameter Alarm Form C alarm provides notification if a monitored parameter exceeds any of the programmed thresholds. This contact has three connections:

- NC (normally closed)
- NO (normally open)
- COM (common)

Connection can be made directly to the facility's alarm reporting system. If multiple units are used, then these contacts can be connected in series or parallel, depending on the requirements for the facility's wiring of NC (normally closed) or NO (normally open).

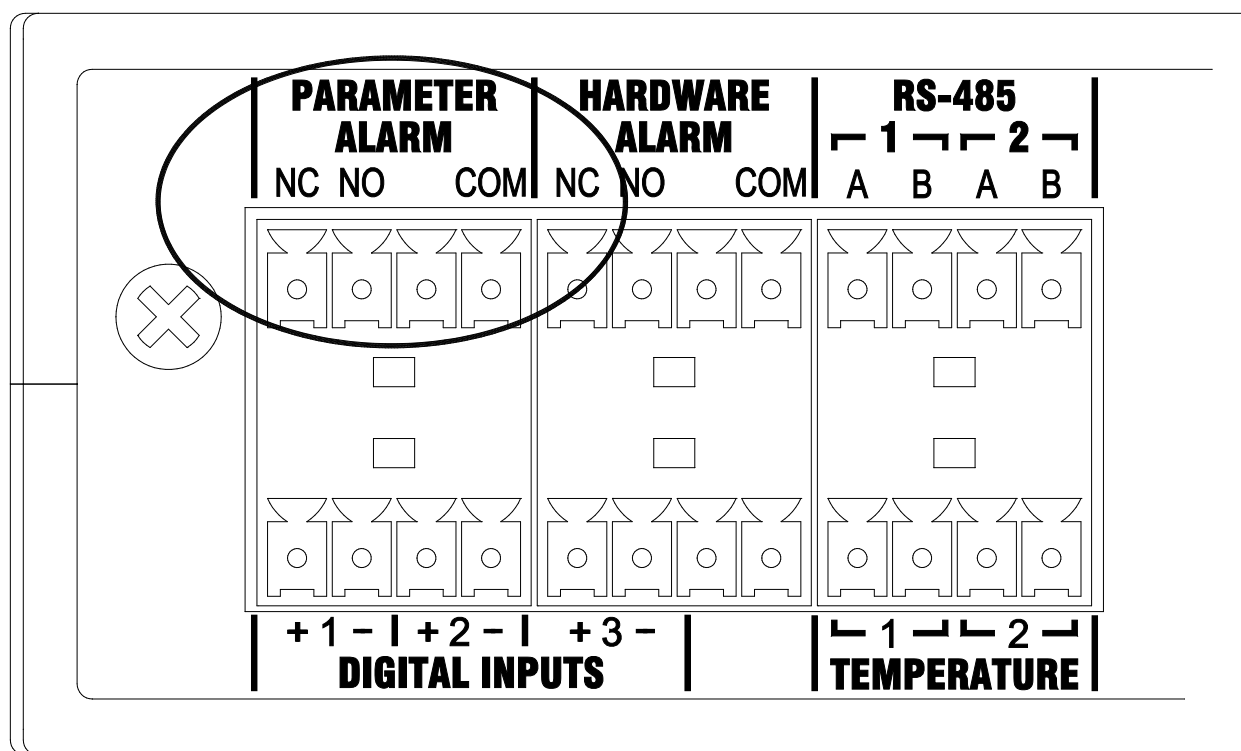


Figure 16 - Alarm Contacts

19. Hardware Alarm Connection

The Hardware Alarm Form C alarm contact provides notification if a hardware failure has been detected within the UXIM. This contact has three connections:

- NC (normally closed)
- NO (normally open)
- COM (common),

Connection can be made directly to the facility's alarm reporting system. If multiple units are used, then these contacts can be connected in series or parallel, depending on the requirements for the facility's wiring of NC (normally closed) or NO (normally open).

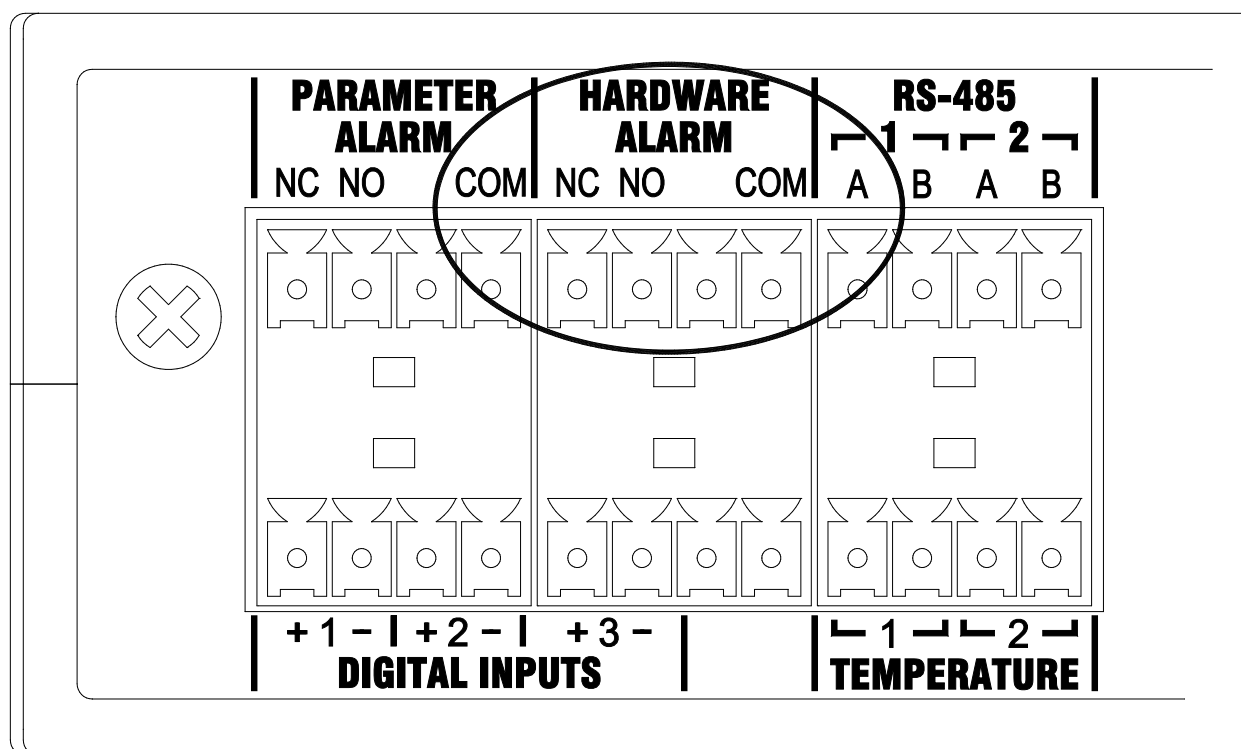


Figure 17 - Hardware Alarm Contacts

20. UXIM Specifications

20.1 UXIM System Specifications

Safety Approvals

- UL61010-1
- EN61010-1
- IEC61010-1

EMC Approvals

- EN61326-1
- FCC part 15 class A

Operating Environment

- Temperature Range: 0°C to 40°C (32°F to 104°F)
- Humidity Range: 0% to 80% RH (non-condensing) at 5°C to 31°C, 0% to 50% RH (non condensing) at 31°C to 40°C
- Indoor Use Only
- Measurement Category O (500V Transient Rating)
- Pollution Degree 2
- Altitude: 0 to 2000 meters above sea level

Alarms

- 2 - Form C relay contact, 2A at 30Vdc

Input Power

- DC Power, 85 to 150VDC, 11.3W max.

Communications

- RS485/1 - MODBUS
- RS-485/2 - Proprietary for optional accessories
- Ethernet -TCP/IP MODBUS, SNMP, SMTP
- USB
- Fiber optic for BDSU integration

Packaging

- 1U chassis
- 17.00"W x 1.75"H x 12.00"D
- 4.0 lbs.
- Wall or 19" Rack Mount

20.2 Cell Measurements

This section describes cell measurement specifications.

Parameter	Tolerance
Cell Voltage	0 to 3V, 0.1% \pm 2mV
Internal Cell Resistance	0 to 32,000 $\mu\Omega$, 5% of reading \pm 2 $\mu\Omega$
Intercell Resistance	0 to 5000 $\mu\Omega$, 5% of reading \pm 5 $\mu\Omega$
Intertier/charge cable Resistance	0 to 5000 $\mu\Omega$, 5% of reading \pm 5 $\mu\Omega$
Cell/Monobloc Temperature	0°C to 80°C \pm 0.1°C (32°F to 176°F)

Table 6 - Cell Measurement Specifications

20.3 System Measurements

This section describes system measurement specifications.

Parameter	Tolerance	Number Of Inputs
String Voltage	85Vdc to 150 Vdc \pm .5%	Calculated
String Current	0 to 2000ADC \pm 1% of full scale	Calculated
Ripple Current	0 to 250 Amperes RMS, \pm 5% of full scale	Calculated
Float Current	0 to 5000mADC, \pm 50mA	Calculated
Ambient Temperature	0°C to 80°C \pm 0.1°C (32°F to 176°F)	1

Table 7 - System Measurement Specifications

22. Index

- 12' Ambient Temperature Sensor 5-2
- 15 AMP SB Fuse 5-2
- Alarms 20-1
- Ambient Temperature 20-2
- Ambient Temperature Input 13-1
- Ambient Temperature Sensor Connection 13-1
- Battery String Isolation 6-1
- Caution 1-1
- CAUTION 10-2
- Cell Measurements 20-2
- Cell/Monobloc Number 1 Identification 6-1
- Cell/Monobloc Temperature 20-2
- Charger Control Sense Lead Connection 12-1
- Communications 20-1
- Digital Input
 - Channel 8-1
 - Configuration 8-1
 - Jumpers 8-1
 - Modes 8-1
- Digital Inputs Connection 14-1
- Discharge Current 20-2
- Dual Posts 10-3
- EMC Approvals 20-1
- Equipment Access 1-2
- Equipment Location 6-1
- Equipment Mounting 9-1
- Equipment Operation 1-2
- Equipment Service 1-2
- Fiber Optic Connection 16-1
- Float Current 20-2
- fuse 10-1
- Fused Load Lead 11-2
- Fused Load Lead Harness Connection 11-1
- Fuses 1-2
- Input Power 20-1
- Installation
 - Task List 4-1
- Insulation Rating For Wires 1-3
- Internal Cell Resistance 20-2
- Internal Component Replacement 2-1
- materials
 - standard 5-3
- Materials Received List 5-1
- Mounting Options 6-1
- Multiple Positive and Negative Posts 10-3
- Network Protocols 17-1
- Note 1-1
- Operating Damaged Equipment 1-2
- Operating Environment 20-1
- Packaging 20-1
- Parameter Alarm Connection 18-1
- Part Number
 - 3703-006-fiber optic cable 5-3
 - KIT-3703-015-fiber optic polishing kit 5-3
- Preventive Maintenance 2-1
- Product Safety Practices 1-2
- Protocols 17-1
- Rack Mounting 9-1
- Recessed Post
 - Tab Washer Assembly 7-2
- Resistance Steps Input Connection 11-1
- Ripple Current 20-2
- RS-485 Communication Connection 15-1
- RS-485 Termination 8-3
- Safety Approvals 20-1
- Safety Information 1-1
- Safety Symbols 1-1
- Sense Lead and Ring Terminal Cleaning 2-1
- Sense Lead Harness Connection 10-1
- Servicing and Adjusting 1-2
- String Voltage 20-2
- Substituting Parts or Modifying Equipment 1-2
- Supported Network Protocols 17-1
- System Component Cleaning 2-1
- System Installation 4-1
- System Measurements 20-2
- System Overview 3-1
- Tab Washers
 - Installation 7-1
- Temperature Harness
 - 12 foot 13-1
- UXIM System Specifications 20-1
- Ventilation 1-3
- Visual Inspection 2-1
- Wall Mounting Kit 5-3
- Warning 1-1
- Wire Length 6-1